



OPERATION AND MAINTENANCE MANUAL, M06 TRIPLEX PUMPS

Rev	ECN No.	Date	Reviewed By	Approved By	Status
A	5024068	17-MAR-2010	Taylor, Justin	Singleterry, Ronald	RELEASED

Summary:

This is a manual for FMC M06 triplex plunger pumps. These pumps have a stroke length of 1 1/2 inches and a maximum continuous duty power rating of 16.6 horsepower (12.4 kilowatts). Refer to part number 5266227 for printing information.

OMM50001243

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



Table of Contents

Section	Title	Page
1.0	Important Safety Instructions.....	6
2.0	M06 Pump Features	7
3.0	Storage Instructions.....	8
3.1	Short Term Storage	8
3.2	Short Term Storage for Severe Environments.....	8
3.3	Long Term Storage	9
3.4	Returning a Stored Pump to Operation	9
3.5	Precautions during Freezing Weather	9
4.0	Installation Guidelines	10
4.1	General Location	10
4.2	Mounting Pump to Foundation and Power Source	10
4.3	Suction Piping Recommendations.....	11
4.4	Discharge Piping Recommendations	12
4.5	Multiple Pump Systems	13
5.0	How to Start a Pump	13
6.0	Lubrication of Power End	16
6.1	Recommended Lubricants.....	16
6.2	Oil Changes.....	16
7.0	Inspection and Preventative Maintenance Chart.....	18
8.0	Estimated Life of Wearing Components.....	19
9.0	Component Parts List	20
10.0	Service Procedures	25
10.1	Replacing Plunger Packing	25

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197

info@dupagro.com

www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

10.2	Removing the Fluid Cylinder	29
10.3	Replacing Valves.....	31
10.3.1	Replacing AR Valves.....	33
10.3.1.1	Introduction.....	33
10.3.1.2	Knock Out Tool.....	34
10.3.1.3	Eccentric Discs	35
10.3.1.4	Threaded Type (AR Valves Only)	39
10.3.1.5	Installation of AR Valves	40
10.3.2	Replacing Disc Type Valves.....	41
10.3.2.1	Introduction.....	41
10.3.2.2	Valve Removal Tools	42
10.3.2.3	Installation of Disc Valves	43
10.3.3	Valve Removal and Installation Tools	43
10.4	Servicing the Power End	44
10.4.1	Replacing Plunger Rod Oil Seals and Plunger Rods.....	44
10.4.2	Servicing the Connecting Rod Bearings.....	45
10.4.3	Servicing Bearing Housings, Crankshaft, and Crossheads	48
11.0	Fastener Torque Requirements	56
12.0	Critical Clearances	57
13.0	Trouble-Shooting Pumps.....	58
14.0	Ordering Parts	61
15.0	Glossary of Commonly Used Terms.....	62
16.0	Reference Information	65
17.0	Maintenance Records	66
17.1	Check List for Starting a Pump.....	66
17.2	Maintenance Log.....	67

List of Illustrations

Figures	Page
Figure 1: Pump Assembly Features.....	7
Figure 2: Power End Components.....	20
Figure 3: Fluid End Components (Forged Style).....	21
Figure 4: Fluid End Components (Std. Cast Style).....	22
Figure 5: Plunger and Packing Removal.....	28
Figure 6: Fluid Cylinder Removal.....	30
Figure 7: AR Valve Assembly	33
Figure 8: Using the Knockout Tool.....	34
Figure 9: Valve Disassembly	35
Figure 10: Eccentric Disc in Use	36
Figure 11: Removing the Seat	37
Figure 12: Hydraulic Power used to Remove Valve Seat.....	38
Figure 13: Threaded Tool in use	39
Figure 14: Typical Disc Valve Assembly	41
Figure 15: Illustration for the Ball Knock Out Tool.....	42
Figure 16: Back Cover Removal	47
Figure 17: Connecting Rod Cap and Shell Bearing Removal.....	47
Figure 18: Bearing Housing, Gasket, and Shim Removal	49
Figure 19: Crankshaft Removal	50
Figure 20: Connecting Rod and Crosshead Removal	52

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



List of Tables

Tables	Page
Table 1: Pipe Pressure Chart.....	12
Table 2: Recommended Drip Lubrication Rates	15
Table 3: Lubricant Recommendations	17
Table 4: Maintenance Chart	18
Table 5: AR Valve Tool Guide	43
Table 6: Disc Valve Tool Guide	43
Table 7: Torque Values for Critical Pump Fasteners.....	56
Table 8: Clearance Chart.....	57

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



1.0 Important Safety Instructions

Many accidents occur every year through careless use of mechanical equipment. You can avoid hazards associated with high pressure equipment by always following the safety precautions listed below.

- **SHUT DOWN OR DISENGAGE** the pump and all accessory equipment before attempting any type of service. Failure to do this could cause electrical shock or injury from moving pump parts or components under high pressure. Always adhere to “Lock Out” and “Tag Out” procedures. For mobile equipment, be sure engines and hydraulics cannot be accidentally started.
- **BLEED OFF ALL PRESSURE** to the pump and piping before performing any maintenance on the pump. Failure to do so may spray water or chemicals at high pressure or high temperature onto service personnel.
- **NEVER OPERATE THE PUMP WITHOUT A PRESSURE RELIEF VALVE**, rupture disc, or other type of properly sized over pressure safety device installed.
- **ALWAYS USE A PRESSURE GAUGE** when operating the pump. The pressure must never exceed the maximum pressure rating of the pump or damage may occur. This damage can cause leakage or structural damage resulting in injury to personnel.
- **ENSURE THAT NO VALVES ARE PLACED BETWEEN THE PUMP AND PRESSURE RELIEF VALVE.** If the pump is started with a closed or restricted valve in line before the pressure relief valve, the pump may exceed the rated or design pressure limits and rupture causing injury to personnel.
- **USE SHIELDS OR COVERS AROUND PUMPS** when pumping hot water, chemicals, or other hazardous liquids. This precaution can prevent the exposure of service personnel to these fluids should leakage occur.
- **ALWAYS USE GUARDS** on all belt drives, couplings, and shafts. Guards can prevent personnel from becoming entangled and injured by rotating and reciprocating parts.
- **USE EXTREME CAUTION WITH SOLVENTS** used to clean or degrease equipment. Most solvents are highly flammable and toxic. Observe all safety instructions on packaging.
- **FOLLOW NORMAL ENVIRONMENTAL GUIDELINES WHEN** fluids, lubricants, or solvents are disposed of or spilled.
- **NEVER MODIFY THE PUMP** to perform beyond its rated specifications without proper authorization in writing from FMC.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

2.0 M06 Pump Features

Exceptional design, workmanship, materials, and over 100 years of pump building experience are features you'll find built into every FMC pump. The M06 pumps are available with disc valves or abrasion resistant (AR) valves.

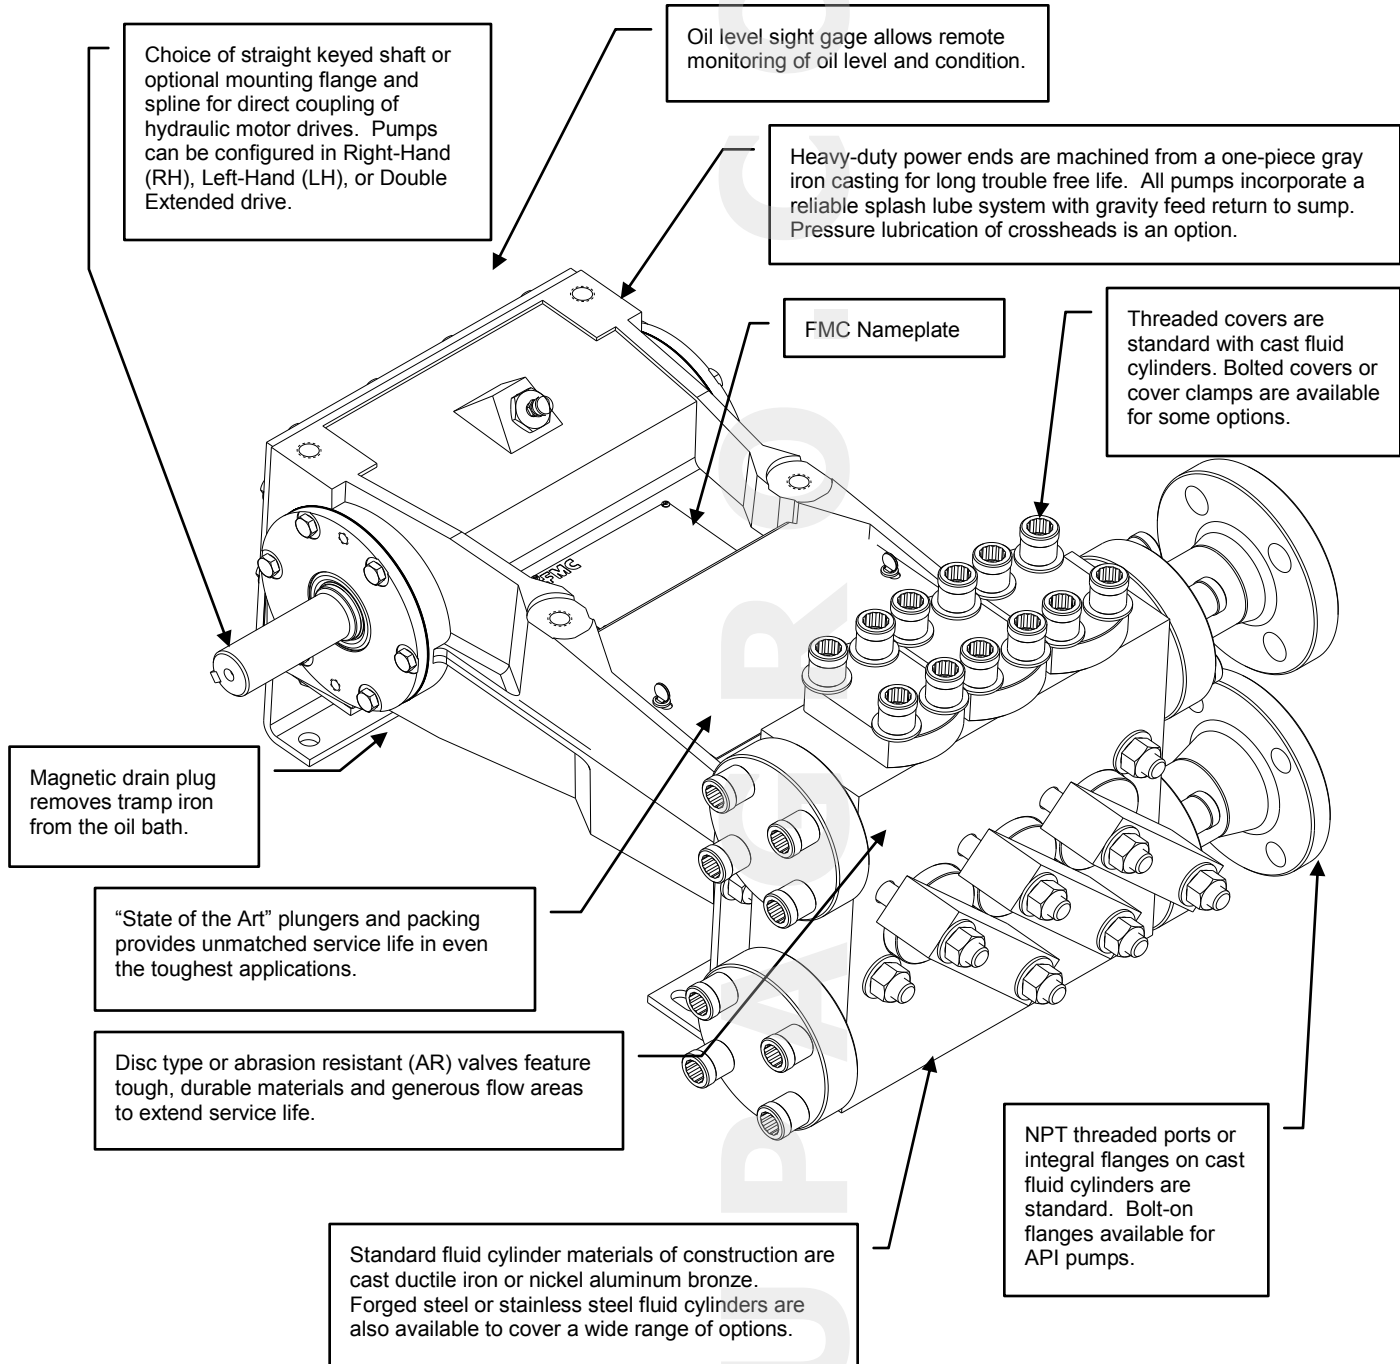


Figure 1: Pump Assembly Features

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197

info@dupagro.com

www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



3.0 Storage Instructions

Proper storage of your FMC pump will ensure that it is ready for service when started. Follow the guidelines below that fit the requirements of your application.

FMC pumps come from the factory **without crankcase oil** and are prepared for storage periods of up to six (6) months in proper environmental conditions. Indoor storage in a dry, temperature-controlled location is always recommended. If pumps are to be stored short term (less than six (6) months) in a severe environment, they should be prepared using the procedures outlined in section 3.2. If the pump is to be stored, or is inactive, for periods in excess of six (6) months, it is necessary to prepare the pump as outlined section 3.3. Remember that any fluid that poses an environmental hazard or is toxic must be handled and disposed of properly.

3.1 Short Term Storage

If the pump is stored in an indoor, temperature controlled environment for less than six (6) months, no special steps are required to prepare it for storage. As a general rule for pumps in corrosive fluid applications, the fluid end should be drained, flushed with water or other non-corrosive cleanser and compressed air used to blow dry whenever idle.

3.2 Short Term Storage for Severe Environments

If the pump has been in service, drain any fluid from pump fluid end by removing the plugs on the bottom of the fluid cylinder, flush the fluid end with water to clean out any of the remaining pumpage and blow dry with compressed air. Drain the power end (crankcase) oil and remove the oil fill cap (or plug). Pour 1 to 1-1/2 cups of internal rust inhibitor oil described in Table 3 (Lubricant Recommendations), into the oil fill hole and then install the non-vented filler cap or plug.

Pour 1/2 cup of internal rust inhibitor oil described in Table 3 (Lubricant Recommendations), into the suction and discharge ports of fluid end, and then install pipe plugs in openings.

Coat all exposed, unpainted metal surfaces (for example, Driveshaft) with preservative oil. Cover the entire pump with a weather resistant covering such as a canvas or plastic tarp.



3.3 Long Term Storage

Long-term storage is defined as any period when the pump is in storage or idle in excess of six (6) months. If the pump has been in service, drain any fluid from the pump fluid end, flush the fluid end with water to clean out any of the remaining pumpage, and blow dry using compressed air. Pour internal rust inhibitor oil described in Table 3: Lubricant Recommendations, into the suction and discharge ports of fluid end, and then install pipe plugs in openings. Use the same quantity as described in 3.2.

Drain the oil from the pump power end. Remove the rear cover to expose the drive components. Spray all internal parts with a rust preservative that is soluble in lubricating oil while rotating the driveshaft several turns by hand to ensure complete coverage. Replace the rear cover and add 1 to 1-1/2 cups of internal rust inhibitor with those or equivalent recommended in Table 3.

Spray a rust preventative onto all exterior machined surfaces paying attention to any unpainted areas like the crankshaft extension. Remove the oil fill cap and cover the breather opening with a plug or other suitable means in order to keep the preservative atmosphere sealed inside the power end.

Never store the pump on the floor or ground. Always place it on a shelf or pallet that is several inches above ground level. Cover the entire pump with a canvas or plastic tarp. Every two months inspect the unit. Rotate the crankshaft by hand at least 4 turns during each inspection. Drain and replace the rust inhibitor after every six (6) months of storage.

3.4 Returning a Stored Pump to Operation

Before operating a pump that has been prepared for storage, drain the preservative and lubricating oil mixture from the power end (crankcase). Reinstall the drain plug, breather/filler cap, and any other components that were removed for storage. Once these steps have been completed, follow the normal pump start up procedures outlined in this manual. NOTE: FMC can factory prepare units for long term storage for a nominal fee if specified at the time of order.

3.5 Precautions during Freezing Weather

Freezing weather can cause problems for equipment when pumping water-based fluids that expand in volume when changing from a liquid to a frozen solid state. When water is left in a pump fluid end and exposed to freezing temperatures, the expansion of the water as it freezes can rupture the fluid cylinder of the pump and cause equipment damage. Injury may result when starting equipment that has been damaged.

Whenever the pump is stored or idle in conditions that are near or below freezing, any water-based fluids should be removed from the pump. The best way to do this is to run the pump for a few seconds with the suction and discharge lines disconnected or open to atmosphere. This will clear the majority of the fluid from the pumping chamber as well as the suction and discharge manifolds. After the run, blow compressed air through the fluid end to remove all traces of fluid. If possible, remove plugs from the

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



bottom of the fluid cylinder and push open the suction valve seats to ensure that all fluid is drained from the pumping chamber between the suction and discharge valves.

As an alternative to the previous procedure, a compatible antifreeze solution can be circulated through the fluid end. RV antifreeze, propylene glycol, is recommended for this purpose. Remember that any fluid that poses an environmental hazard or is toxic must be handled and disposed of properly.

4.0 Installation Guidelines

A proper installation is essential to optimal performance, long service life, and reduced maintenance requirements. Take time to thoroughly plan all aspects of your installation.

4.1 General Location

It is important to position the pump on as flat and level a surface as possible to assist the splash oil lubrication system. Park mobile equipment, such as drilling machines, on as level a surface as possible. Whenever possible the pump should be mounted in a clean, dry location with sufficient lighting and adequate space for easy inspection and maintenance. Locate the pump as close to the suction source as possible to allow for the shortest and most direct routing of the inlet piping.

4.2 Mounting Pump to Foundation and Power Source

The M06 pumps described in this document must be mounted in a horizontal position only. Secure the pump to the mounting surface using the four (4) holes provided in the pump base. Check motor or engine rotation direction to ensure that the top of the pump crank shaft rotates toward the pump fluid end when in operation.

For units that are V-belt driven, check the alignment of the sheaves after the unit is installed on its permanent mounting. Tighten belts to the proper tension as recommended by the belt manufacturer. Verify that the sheaves are in line and parallel to each other with a straight edge.



Never operate the pump without a belt guard securely installed.

CAUTION

For direct-coupled or spline-driven units, ensure that the shafts are centered and parallel when the driver is mounted to the pump. Follow the coupling manufacturer instructions for installation procedures and tolerances.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



4.3 Suction Piping Recommendations

Poor suction piping practices are a very common source of pump problems. To ensure proper operation, it is very important to follow good design practice in the installation of the suction system before the pump is operated. A small amount of additional planning and investment in the piping system usually provides for better pump performance and longer periods between service requirements. It is difficult to diagnose many pump problems without the aid of a suction pressure gauge. For this reason, FMC recommends that a gauge always be installed in the suction line directly before it enters the pump.

The suction line from the fluid source to the pump should be as short and direct as possible. Use rigid piping, non-collapsible hose or a combination of both as circumstances require in your installation. The suction pipe size should be at least equal to or one size larger than the pump inlet. Long piping runs, low suction heads, or indirect pipe routing may require even greater over-sizing of the suction line for proper operation of the pump. A suction pulsation dampener is recommended to reduce the effects of acceleration head to help when suction conditions are not optimal. In some cases it may be necessary to install a booster pump in the suction line of the pump to obtain sufficient pressure for the pump to operate successfully.

The suction line must be configured so there are no high spots in the line where air pockets can collect. These pockets may make the pump difficult to prime and cause rough, erratic operation. A drain valve or plug should be installed at the low point of the suction line to allow for draining before freezing conditions or for maintenance.

FMC recommends that all piping be supported independently of the pump. By supporting the piping this way, vibrations are reduced and stress on the pump is kept to a minimum. The use of elbows, nipples, unions, or other fittings should be minimized. Make sure that all joints and connections are airtight. Air leaks reduce the capacity of the pump and can result in cavitation, rough operation, and/or loss of prime. To help isolate mechanical and hydraulic vibrations, FMC recommends the use of flexible pipe couplings or hose connections between the pump and any rigid piping.

Always ensure that calculated system Net Positive Suction Head available, NPSHa, exceeds pump Net Positive Suction Head required, NPSHr, by at least 5 feet (1.5 meters) of water for proper operation of the pump. NPSH requirements for each pump model are provided on the product data sheets available through FMC or your authorized FMC reseller. FMC does not recommend using the pump in static lift conditions without prior factory approval.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



4.4 Discharge Piping Recommendations

1. Route the discharge piping in as short and direct a route as possible. Use the same pipe size as the outlet of the pump. In installations where the discharge piping is in excess of 50 feet (15 meters) it is suggested to use the next larger size pipe to minimize friction losses downstream of the pump.

Table 1: Pipe Pressure Chart

Allowable Working Pressure For Steel Pipe (PSI @ 100F)				
Pipe Size (inches)	Pipe Schedule Number			
	40	80	160	XX
3/8	1,700	3,800		
1/2	2,300	4,100	7,300	12,300
3/4	2,000	3,500	8,500	10,000
1	2,100	3,500	5,700	9,500
1 1/4	1,800	3,000	4,400	7,900
1 1/2	1,700	2,800	4,500	7,200
2	1,500	2,500	4,600	6,300
2 1/2	1,900	2,800	4,200	6,900
3	1,600	2,600	4,100	6,100

14.5 psi = 1 Bar



Always use pipe or hose that is designed for your particular pressure requirements. Inadequate pressure ratings can allow hose or pipe to fail, resulting in equipment damage and possible personal injury.

CAUTION

Normal hose pressure ratings are clearly marked on the outer surface of the hose. Working pressure ratings of steel pipe can be obtained from the manufacturer or from the chart shown in Table 1 above.

2. Always use a pressure gauge in the pump discharge line. A properly functioning gauge mounted at the pump (and before any valves) is required to accurately determine the operating pressure of a pump and to conduct troubleshooting.
3. Ensure that all piping is supported independently of the pump to reduce vibrations and strain on the pump. Pulsation dampeners on the discharge are recommended to reduce pressure pulsation and resulting vibration. The use of elbows, nipples, unions, or other fittings should be kept to an absolute minimum. Avoid short radius 90° elbows; use long radius elbows instead. To help isolate and reduce mechanical and hydraulic vibrations, FMC recommends the use of

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



flexible pipe couplings between the pump and any rigid piping and the use of pulsation dampeners.

4. A properly adjusted pressure relief valve or rupture disc must be installed immediately downstream of the pump to prevent damage or injuries resulting from over pressure or deadhead conditions. The relief valve discharge line must be as large as the pipe outlet of the relief valve. Never install valves in the relief valve discharge line or between the pump and relief valve. FMC recommends that the discharge from the relief valve be returned to the tank or drain, not back into the pump suction line.
5. It is recommended that a start-up bypass line and valve be installed in the discharge line to allow flow to bypass the relief valve. This allows the pump to start in an unloaded condition (no discharge pressure).

4.5 Multiple Pump Systems

Special consideration must be taken to avoid vibration, pulsation, or uneven flow distribution problems when operating multiple reciprocating pumps using common suction and discharge piping headers. It is recommended that the user contact FMC or experienced industry consultants for assistance with the design of the system and pump installation in these situations.

5.0 How to Start a Pump



CAUTION

Always take special precautions when starting a pump for the first time or after any extended shutdown. Never assume that someone else has properly prepared the pump and system for operation. Always check each component of the system prior to every start-up.

The check list that follows is intended to be a general guide for starting a pump in a typical installation. A copy of the check list is provided in Section 17.0 to allow it to be copied and used at start up or at service intervals. Every installation is different, and each may have different requirements to ensure safe and successful operation. **It is the responsibility of the operator to determine the correct start-up procedure for each installation.**

1. Ensure that the drain plug(s) on the bottom of the pump crankcase have been installed and are tight. Ensure that the oil level sight glass, if equipped, has been properly installed.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

2. Check the oil level to ensure that the pump is properly filled with non-detergent motor oil or a synthetic oil as described in Table 3 and that the oil has not been contaminated with water or other contaminants.



NOTE

FMC pumps are shipped with no oil in the power frame and must be filled to the proper level with the proper grade of non-detergent motor oil or synthetic oil prior to start-up. Use Table 3 for selecting the correct type of oil for your service.

Pump model M06 requires 2 quarts (1.9 liters) of oil

3. Check to ensure that power is locked out and tagged out. Turn the pump over by hand if possible to ensure free, unobstructed operation. Clean the plungers with a soft cloth while rotating the pump by hand.
4. If the FMC pump is supplied with a factory mounted packing lubricator, ensure that it is filled to the recommended level. Refer to Table 3 for the recommended packing lubricant. Follow the vendor specifications for filling intervals and proper maintenance. The recommended lubrication rates are specified in Table 2. Hand operate each lubricator pump to provide initial lubrication to packing. It may be necessary to bleed the lubrication lines from the lubricator to the stuffing boxes.
5. Check the plunger rods to ensure that they are free from abrasive particles or debris.
6. Ensure that the pressure relief valve and all accessory equipment have been installed and properly adjusted. Verify that all joints are pressure tight.
7. Open the suction line valve to allow fluid to enter pump. Prime the fluid cylinder if necessary on the initial start up or after the system piping has been drained. The valve covers may have to be cracked open to assist with priming. .



CAUTION

Do not loosen the valve covers with volatile or hazardous fluids.

8. Apply approximately 5-10 drops of glycerin or mineral oil to each plunger and plunger rod to lubricate the packing and seals.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



9. Make sure that all guards are in place and secure. Verify that all personnel are in safe positions and that system conditions are acceptable for operation.
10. The pump is now ready to start.

**NOTE**

Whenever possible, use a bypass in the discharge line to allow the pump to start in an unloaded condition (no discharge pressure). Slowly close the bypass line to bring the pump into full load conditions. Shut down immediately if the flow becomes unsteady, pressure fluctuates, or if unusual sounds or vibrations are noted.

11. Take temperature readings of the power end and stuffing boxes. Do not exceed 170° F (77° C) on power end. Do not exceed 160°F (71° C) on packing unless packing is designed for hot fluid service.

Table 2: Recommended Drip Lubrication Rates

PLUNGER SIZE (Inches)	Up to 1 1/2	1 1/2 to 2 1/2
DROPS PER MINUTE	8 to 10	12 to 14

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



6.0 Lubrication of Power End

6.1 Recommended Lubricants

Few factors can influence the life of a pump more than the power end lubricant (oil). Careful selection of the right type of oil for each particular application will help ensure optimal performance from an FMC pump.

The intent of this section is to state the general lubrication requirements for FMC pumps. Several products are listed by manufacturer name in Table 3 below in order to aid the customer in locating suitable lubricants. The following listing is not exclusive, nor an endorsement of any particular product or manufacturer. Consult FMC for lubrication recommendations for applications that fall outside of the conditions listed in Table 3.



Lubricant temperatures should not exceed 170° F (77° C) for continuous duty or 180° F (82° C) for intermittent duty (less than 8 hours per day) applications. Crankcase temperatures that exceed these limits will cause the lubricant to prematurely “break down”. The result will be poor lubrication and failure of power end components, especially bearings.

NOTE

The user should consider installation of a heating element such as those furnished by Watlow® for cold ambient temperatures or a supplemental oil cooler (heat exchanger) for high ambient temperatures.

6.2 Oil Changes

- Oil changes must be carried out after first 50 hours of operation, and subsequently after every 4000 hours or at least every 6 months. These intervals may be modified depending on actual operating conditions.
- Oil should be changed when hot to prevent build up of sludge deposits.
- It is advisable to check oil level daily. If more than 10% of the total capacity has to be added, check for oil leaks.
- Do not mix oils of different types, even if produced by the same manufacturer.
- Never mix mineral and synthetic oils.
- To avoid the risk of scalding or burns, pay attention to oil and power end temperature during an oil change.
- Follow environmental guidelines when changing and disposing of lubricants.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

Table 3: Lubricant Recommendations

RECOMMENDED LUBRICANT CHART								
Type of Service	Ambient Temp	Mineral Oil Lubricant				Synthetic Lubricant *		
		SAE Grade	ISO Viscosity (cSt @ 40 C)	SSU Viscosity	Manufacturer Brand Name	SAE Grade	ISO Viscosity (cSt @ 40 C)	Manufacturer Brand Name
General Service	0 F to 100 F (-18 C to 38 C)	30	100	550	Texaco® Meropa 100 Shell® Omala 100 Shell® Rotella T SAE 30 Exxon® XD-3 30 wt Mobil® Trans HD-30	5W-40 NA	90.0@40 15.0@100 99.1@40 13.9@100	Shell® Rotella T Synthetic SAE 5W-40 Mobil® SCH 627
High Ambient Temperature Service	100 F to 130 F (38 C to 54 C)	50	250	1165	Texaco® Meropa 68 Shell® Omala 220 Shell® Rotella T SAE 50 Exxon® HD-3 50 wt Mobil® Trans HD-50	5W-40 NA	90.0@40 15.0@100 217@40 29.9@100	Shell® Rotella T Synthetic SAE 5W-40 Mobil® SCH 630
Cold Ambient Temperature Service	0 F to -30 F (-18 C to -34 C)	20	68	350	Texaco® Meropa 68 Shell® Omala 68 Shell® Rotella T SAE 20 Exxon® HD-3 20 wt Mobil® Trans HD-20	5W-40 10W-30 NA	90.0@40 15.0@100 12.0@100 69.9@40 10.9@100	Shell® Rotella T Synthetic SAE 5W-40 BP® Vanellus E8 ULTRA 5W-30 Mobil® SCH 626
Frequent Start-Stop Operation		40	150	775	Texaco Meropa® 150			
SPECIALTY ITEMS								
Internal Rust Inhibitor					Cortec® VCI 329			
External Rust Preventative					Texaco® Metal Protective Oil L			

*Synthetic lubricants are suggested for high or low temperature service.

Cortec® is a registered trademark of Cortec Corporation, St. Paul, NM

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

** RELEASED FOR MANUFACTURE ** -- Published: 03/19/2010_11:22:48



7.0 Inspection and Preventative Maintenance Chart

Routine maintenance is an essential part of any successful pump operation. Properly maintained FMC pumps are designed to offer years of trouble-free service.

Regular maintenance and inspection will keep your pump operating at peak performance. FMC pumps have been carefully engineered to minimize maintenance requirements and simplify these tasks when they are required. Regular inspections allow operators to become familiar with normal pump operation so they can recognize the signals of potential problems and schedule maintenance. The maintenance chart in Table 4 shown below should be used as a guideline only. Many applications will require adjustment of the intervals shown in this chart for severe or unusual operating conditions.

Table 4: Maintenance Chart

Interval	Component	Service	Remarks
Break In Period	Crankcase Oil	Change	Drain and refill with new oil after first 50 hours of operation. Ensure that the magnetic drain plugs are cleaned to remove debris.
	Inlet Strainer	Inspect	Clean if Required. The amount of material in the strainer will determine the interval of cleaning.
Daily	Complete Pump	Inspect	General inspection of pump and system to check for proper operation of equipment.
	Packing sets	Inspect	Check the stuffing box area or cylinder liner area of the pump for signs of leakage. Replace packing if leakage becomes excessive.
	Pump System	Flush	Required for shutdown when pumping fluids that may harden or corrode the pump if left inside once stopped.
	Crankcase Oil	Inspect	Ensure that the oil is at proper level and has not been contaminated by pumpage or condensation.
Weekly	Packing sets	Lubricate	If pump is supplied with grease zerks, apply grease to each fitting every 100 hours or once per week.
6 Months/ 4,000 hours	Crankcase Oil	Change	Drain and refill with new oil. Clean magnetic drain plugs.
	Stuffing Box Nuts	Inspect	Check the stuffing box nuts with a torque wrench to ensure they are within specification.
	Connecting Rod Bolts or Nuts	Inspect	Check the connecting rod bolts or nuts with a torque wrench to ensure they are within specification. This should be done in conjunction with oil change.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

8.0 Estimated Life of Wearing Components

The information given here is an estimate of the average wear life of listed components in clean liquid service. It is not a guarantee of life for any given application, but is intended to facilitate maintenance schedules and stocking of spares. The maintenance of the power end lubrication system will influence the life of the power end components. The speed of operation and percent of maximum allowable load will influence the life of both power end and fluid end parts. The temperature, abrasiveness, and lubricity of the liquid affect the life of fluid end expendables.

POWER END COMPONENT	ESTIMATED LIFE (Hours)
End and Main Bearings (Roller or Ball)	40,000
Wrist Pin Bushings	20,000
Crossheads	20,000
Lubrication pump	20,000
Power End Cover Gasket	10,000
Connecting Rod Bearings	10,000
Crankshaft Oil Seals	10,000
Oil Seal on Plunger (Pony) Rod	5,000
FLUID END COMPONENT	ESTIMATED LIFE (Hours)
Stuffing boxes	16,000
O-Ring Seals	10,000
Valve Assembly	10,000
Packing adapter rings	8,000
Plungers	8,000
Packing	4,000

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

9.0 Component Parts List

A typical pump configuration is shown below for general reference purposes. This will aid in identifying components for service procedures outlined in the following sections. Actual pumps supplied by FMC may use different components or configurations.

To order service parts or see exact component configurations for your particular pump, refer to the cross-section parts drawing in the literature kit supplied with the pump. Contact your local FMC pump distributor or FMC if you do not have this information.

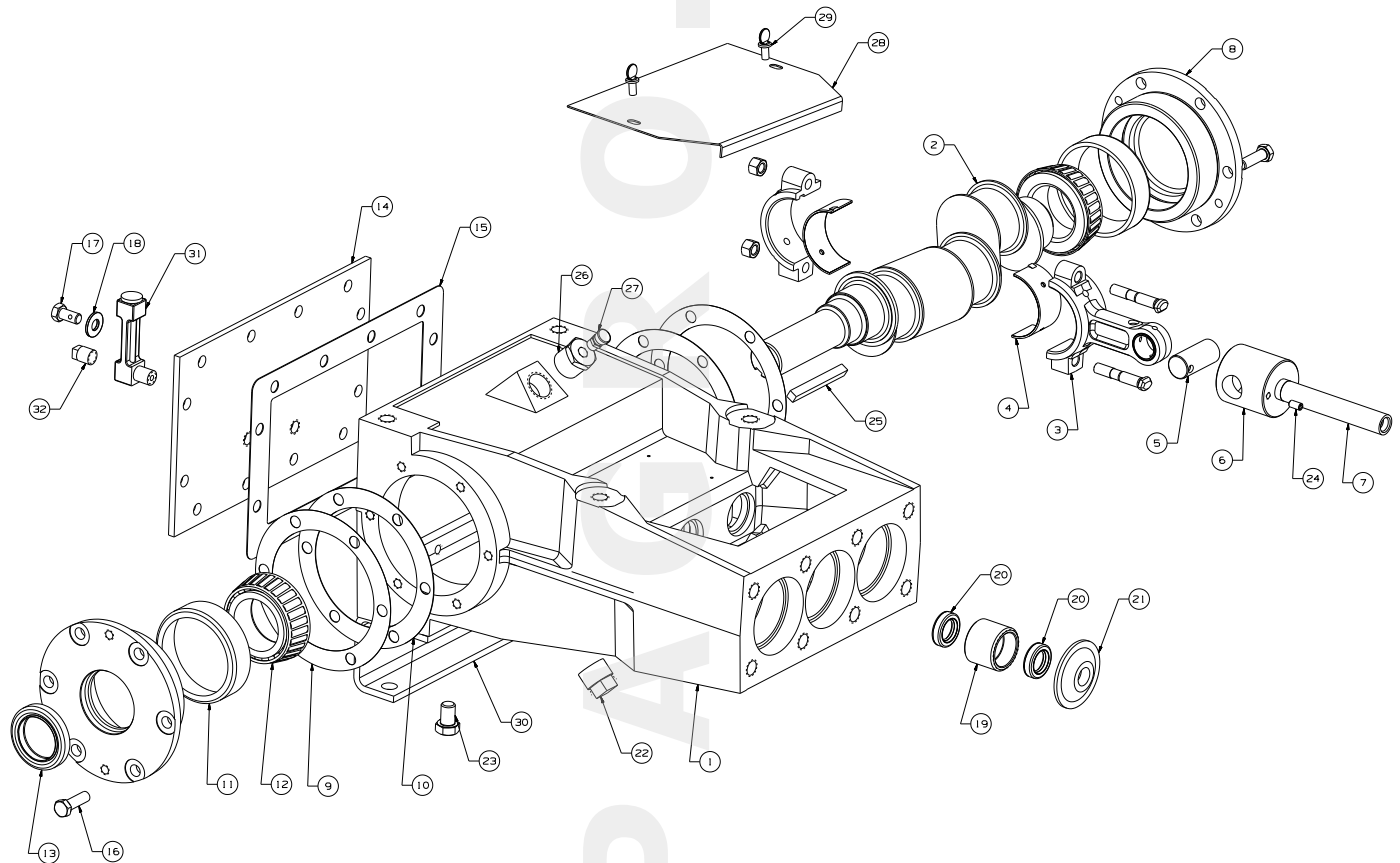


Figure 2: Power End Components

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197

info@dupagro.com

www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

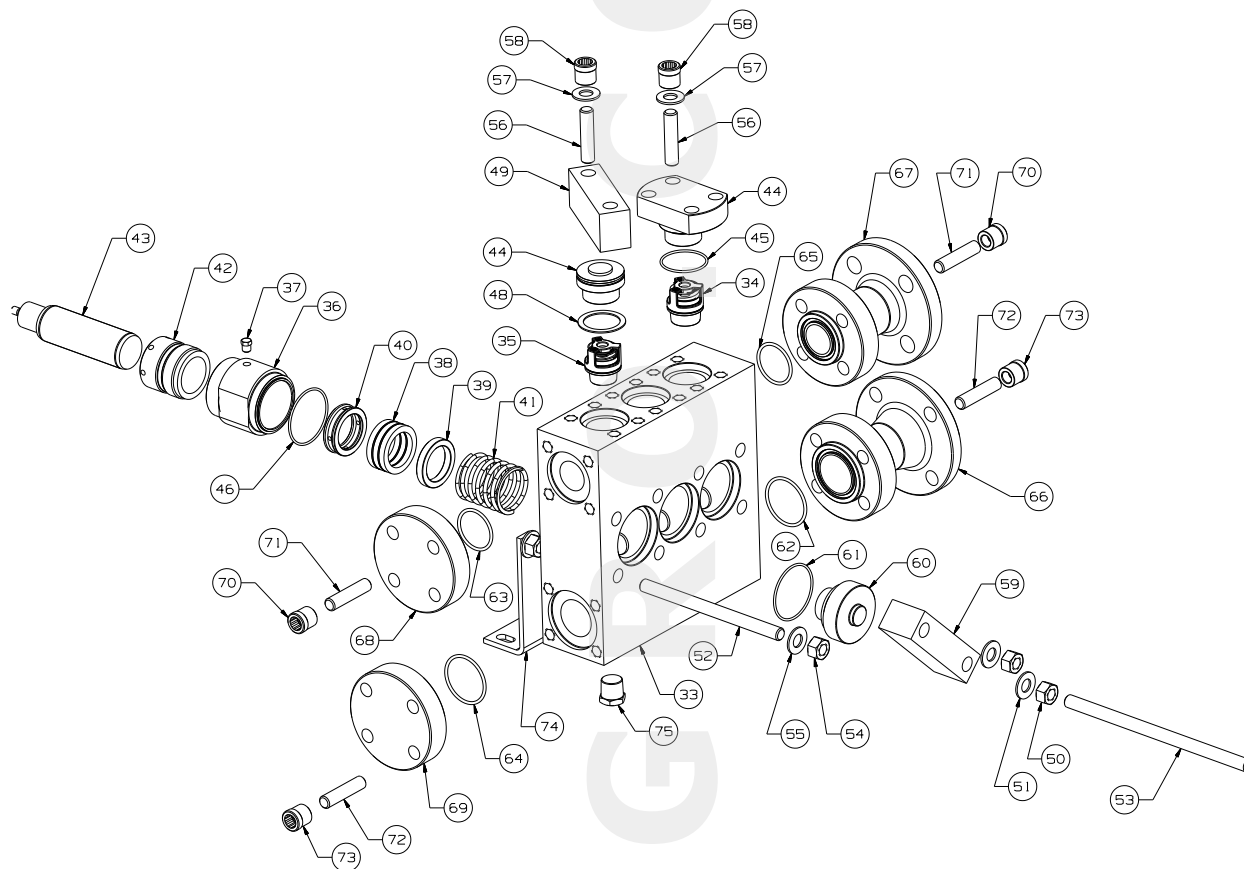


Figure 3: Fluid End Components (Forged Style)

The illustration above depicts a typical pump with a forged fluid cylinder, AR type valves, and V-Ring packing. NOTE: Alternate construction details show round valve cover and “two-bolt” style clamp bars.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197

info@dupagro.com

www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

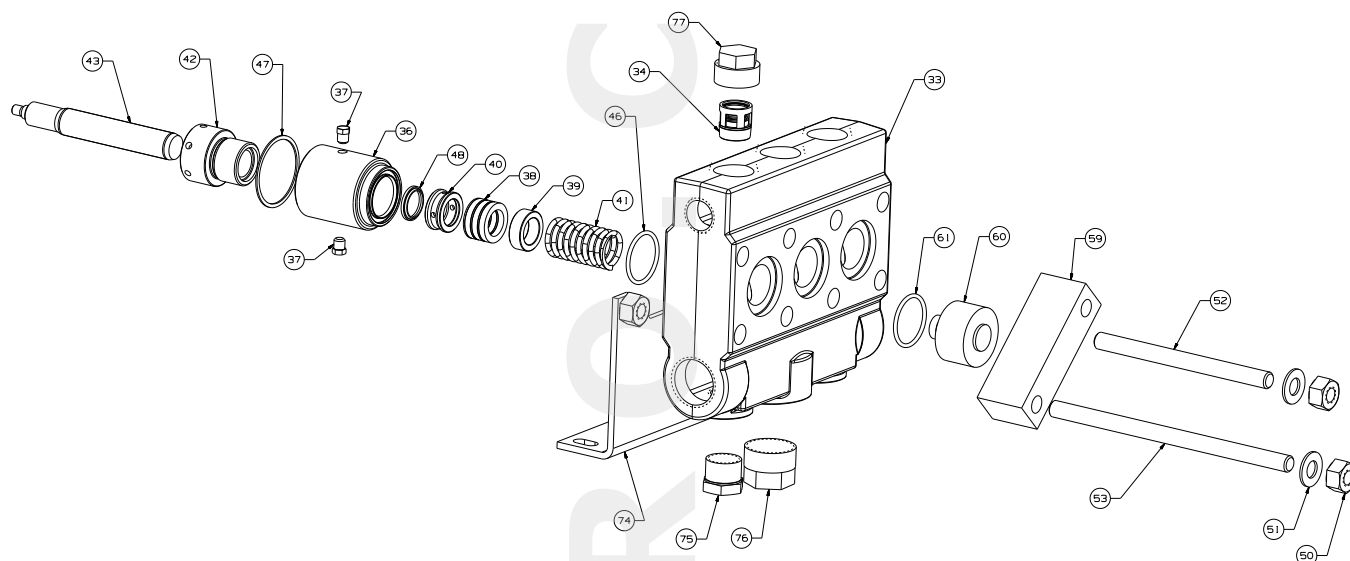


Figure 4: Fluid End Components (Std. Cast Style)

The illustration above depicts a pump with a standard cast iron fluid cylinder, Disc type valves, and standard braided packing. The standard cast iron fluid cylinder uses threaded plugs for valve covers.

The service procedures outlined in this manual are intended to describe the more popular type of pump. Other configurations and minor design differences may exist with alternate pumps. Some procedures may require slight adaptations as a result.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197

info@dupagro.com

www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



Item Number	Component Description	Quantity
1	Power Frame	1
2	Crankshaft	1
3	Connecting Rod Assembly	3
4	Rod Bearing	6
5	Wrist Pin	3
6	Crosshead	3
7	Pony Rod	3
8	Bearing Housing	2
9	Shim	As Required
10	Gasket (Bearing Housing)	2
11	Bearing Cup	2
12	Bearing Cone	2
13	Oil Seal (Bearing Housing)	1
14	Back Cover	1
15	Gasket (Back Cover)	1
16	Cap Screw (Bearing Housing)	12
17	Cap Screw (Back Cover)	12
18	Washer (Back Cover)	12
19	Seal Holder (Pony Rod)	3
20	Seal (Pony Rod)	6
21	Deflector Shield	3
22	Magnetic Pipe Plug (Oil Drain)	1
23	Cap Screw (Rear Foot)	2
24	Set Screw (Crosshead / Wrist Pin)	3
25	Key	1
26	Bushing (Lube Vent)	1
27	Lube Vent	1
28	Cradle Cover	1
29	Studs (Cradle Cover)	2
30	Rear Foot	1
31	Sight Glass	If Equipped
32	Pipe Plug (Oil Drain)	1
33	Fluid Cylinder	1
34	Discharge Valve Assembly	3
35	Suction Valve Assembly	3
36	Stuffing Box	3
37	Pipe Plug (Stuffing Box)	3
38	Packing Set	3
39	Throat Bushing	As Required
40	Lantern Ring	3

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



Item Number	Component Description	Quantity
41	Spring	3
42	Adjusting Nut	3
43	Plunger	3
44	Valve cover	3
45	O-ring (Valve Cover)	3
46	O-ring (Stuffing Box)	3
47	Gasket	3
48	Gasket (Valve Cover)	3
49	Valve Cover Clamp	3
50	Hex Nut (Cylinder Cover Clamp)	6
51	Washer (Cylinder Cover Clamp)	6
52	Stud (Fluid Cylinder to Power End)	2
53	Stud (Fluid Cylinder to Power End)	6
54	Hex Nut (Fluid Cylinder Attachment)	2
55	Washer (Fluid Cylinder Attachment)	2
56	Stud (Valve Cover)	As Required
57	Washer (Valve Cover)	As Required
58	Nut (Valve Cover)	As Required
59	Cylinder Cover Clamp	3
60	Cylinder Cover	3
61	O-ring (Cylinder Cover)	3
62	O-ring, Suction Flange (For Flange config)	1
63	O-ring, Discharge Blind Flange (For Flange Config)	1
64	O-ring, Suction Blind Flange (For Flange Config)	1
65	O-ring, Discharge Flange (For Flange Config)	1
66	Suction Flange (For Flange Config)	1
67	Discharge Flange (For Flange Config)	1
68	Discharge Blind Flange (For Flange Config)	1
69	Suction Blind Flange (For Flange Config)	1
70	Nut, Discharge Flange (For Flange Config)	8
71	Stud, Discharge Flange (For Flange Config)	8
72	Stud, Suction Flange (For Flange Config)	8
73	Nut, Suction Flange (For Flange Config)	8
74	Front Foot	1
75	Pipe Plug (Drain, Fluid Cylinder)	As Required
76	Pipe Plug (Drain, Cast Fluid Cylinder)	1
77	Pipe Plug (Valve Cover, Cast Fluid Cylinder)	3

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



10.0 Service Procedures

FMC pumps are designed to simplify all required maintenance. The following sections illustrate step-by-step instructions for performing most common service procedures of a pump. Read each section before starting service work on the pump.

Refer to Figure 2, Figure 3, and Figure 4 for location of components.

It is recommended that a sufficient quantity of clean water be pumped through the fluid end before starting any service procedures that involve fluid end components. This will remove a significant portion of contaminants left in the fluid cylinder by the normal pumpage and improve the ability to work with parts or see potential problems.



WARNING

Many accidents occur every year through careless use or service of mechanical equipment. You can avoid hazards associated with high-pressure equipment by always following the safety precautions listed in Section 1.0.

10.1 Replacing Plunger Packing



CAUTION

CHECK TO ENSURE THAT THE POWER IS LOCKED OUT AND TAGGED OUT (MOTOR OR ENGINE CANNOT BE STARTED).

1. Bleed off all pressure inside pump fluid end before starting any service work. Shut the valve on the inlet piping, if provided, to prevent flow of liquid from the source into the pump during service work.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



2. Refer to Figure 2, **Error! Reference source not found.**, and Figure 4 for location of components. Remove the six hex nuts (50) on the front cylinder cover clamp bars. CAUTION: There are compressed springs beneath the clamp bars (59) and cylinder covers (60). These covers may move suddenly back due to the spring force. Slide the three clamp bars off of the studs (53).
3. Remove the three cylinder covers (60). If the covers are still seated against the fluid cylinder take care during removal (see note above). Removal Tip: It may be necessary to tap on the sides of the covers to free them from the fluid cylinder.
4. Remove the three springs (41) from the fluid cylinder. If a tool is used to hook and remove the spring, take care to avoid scratching or damaging the plunger (43).
5. Loosen plunger (43) and rotate the crankshaft so that the loose plunger is at the top end of the stroke (toward front of fluid cylinder). NOTE: When manually rotating the crankshaft, take care to avoid scratching or marring the shaft.
6. Slide the three deflectors (21) back against the oil seal holders.
7. Use the FMC adjusting nut tool (P/N 5261438) to loosen and unscrew the adjusting nut (42) on the plunger that is at the top of its stroke. Slide the adjusting nut back over the oil seal holder and unscrew the plunger and remove to allow room for packing (38) removal. NOTE: Use caution to avoid damage to the plunger.
8. Slide a soft plastic or metal bar with the appropriate diameter through the opening in the front of the fluid cylinder and drive the packing (38) from the stuffing box toward the power end and oil seal holder.
9. Remove the packing and junk rings. Installation Tip: Notice the style of the packing and how the packing and associated junk rings (throat bushing and/or lantern ring) are arranged. Installation of the new packing and rings will be in the same arrangement and orientation.
10. Repeat steps 5 through 9 for the other two plungers and packing.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



11. Inspect the throat bushing and lantern ring for wear or damage and replace if necessary. Visually inspect the plunger for roughness or scratches and replace if necessary. (Roughness on the plunger sealing surface can reduce packing life.) Also inspect the bore of the stuffing box for wear or roughness.
12. Clean the fluid cylinder counter bores and the appropriate stuffing box regions to avoid contamination during assembly. Apply oil to the plungers, packing, and stuffing box bores.
13. Reverse the previous steps to rebuild the pump after damaged components have been replaced. Installation Tip: The packing and junk rings should be driven into the stuffing box until the throat bushing is just inside the stuffing box.
14. FMC suggests that all seals or gaskets that are disturbed during a service procedure be replaced. Ensure that all fasteners are tightened to the values specified in Table 7: Torque Values for Critical Pump Fasteners.
15. When tightening fasteners on cylinder cover clamps, use crisscross tightening in three stages of torque. Begin at approximately 25% of the final torque value, then 50% of the final torque, and finish at full torque value. CAUTION: If the fluid cylinder was separated from the stuffing boxes or removed, ensure the stuffing boxes are properly piloted in the fluid cylinder and alignment is correct (stuffing box and plunger are axially aligned to plunger rod and perpendicular to the fluid cylinder mounting surface). The boxes should easily slide into the fluid cylinder counter bore.
16. The plunger tip will thread easily into the plunger rod if alignment is correct. If it does not, loosen the nuts (50) and check alignment.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

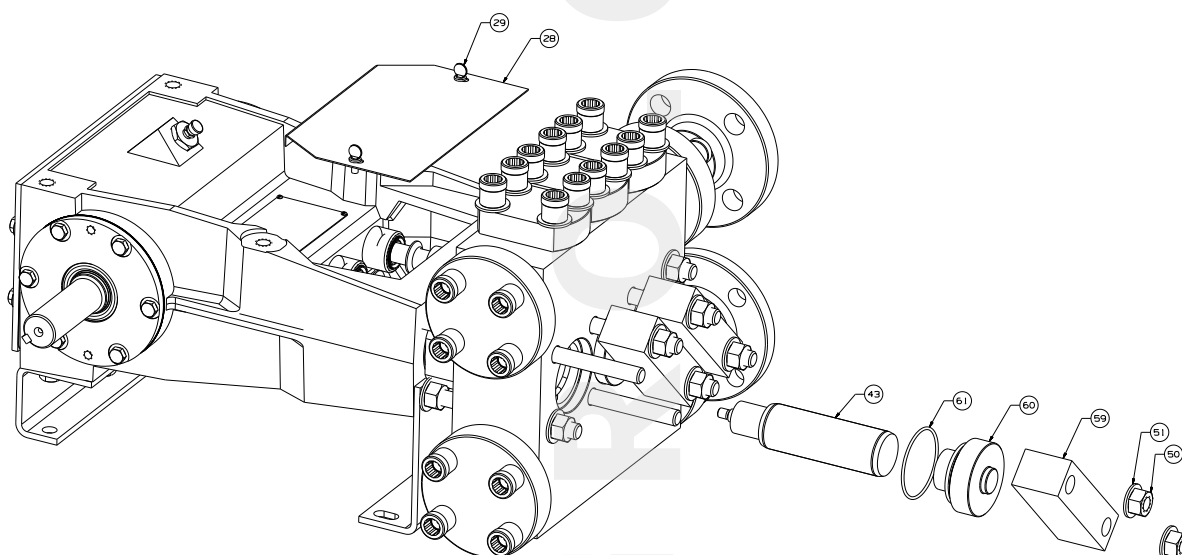


Figure 5: Plunger and Packing Removal



10.2 Removing the Fluid Cylinder



The fluid cylinder (33) may be removed to inspect for internal damage, to be repaired, or to be replaced.

NOTE

Refer to **Error! Reference source not found.**, Figure 4, and Figure 6 for location of the fluid cylinder and related parts.

It is recommended that a sufficient quantity of clean water be pumped through the fluid cylinder before starting any service procedures that involve fluid end components. This will remove a significant portion of contaminants left in the fluid cylinder by the normal pumpage and improve the ability to work with parts or see potential problems.



Many accidents occur every year through careless use or service of mechanical equipment. You can avoid hazards associated with high-pressure equipment by always following the safety precautions listed in Section 1.0.

WARNING



CAUTION: CHECK TO ENSURE THAT THE POWER IS LOCKED OUT AND TAGGED OUT.

CAUTION

1. Bleed off all pressure inside pump fluid end before starting any service work. Shut the valve on the inlet piping if provided to prevent flow of liquid from the source into the pump during service.
2. Remove the cylinder cover clamps (59) and cylinder covers (60) and plungers (43) per Section 10.1.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

3. Disconnect the suction and discharge piping.
4. Remove the 2 nuts (54) holding the fluid cylinder assembly on to the power frame (1). Support the weight of the fluid cylinder assembly and slide the assembly away from the power frame. CAUTION: Use care as the fluid cylinder slides off the studs (52, 53) to avoid injury.
5. Disassemble the fluid cylinder assembly as required to inspect or perform service. Refer to the appropriate section for proper disassembly and reassembly procedures.
6. Inspect all parts for signs of wear or damage. Replace parts if required.
7. Reverse the previous steps to rebuild the fluid cylinder assembly after worn or damaged components have been replaced. FMC suggests that all seals or gaskets that are disturbed during a service procedure be replaced.
8. Ensure that all fasteners are tightened to the values specified in Table 7: Torque Values for Critical Pump Fasteners. Please note that if the nuts (50, 54) on the fluid cylinder studs (52, 53) are not properly torqued, a failure is possible.

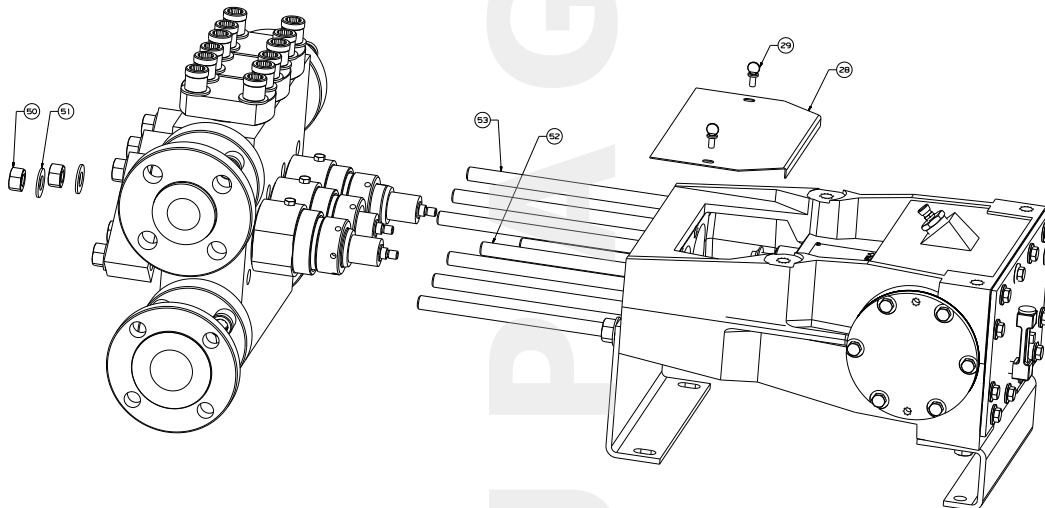


Figure 6: Fluid Cylinder Removal

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



10.3 Replacing Valves

Two types of valves may be supplied with various models of the M06 series pumps. They are disc valves and AR (Abrasion Resistant) valves. The disc valves are the most commonly used valves.

A minimum of approximately 3 feet (0.9 m) of clearance is required above the fluid cylinder to allow valve service without removal of the fluid end. If sufficient clearance is not available, the fluid end must be removed as outlined in previous section for valve service. The following procedure is written under the assumption that sufficient clearances exist.



WARNING

Many accidents occur every year through careless use or service of mechanical equipment. You can avoid hazards associated with high-pressure equipment by always following the safety precautions listed in Section 1.0.



CAUTION

CHECK TO ENSURE THAT THE POWER IS LOCKED OUT AND TAGGED OUT.

1. Loosen the hex plugs (77) on the top of the fluid cylinder if threaded covers are supplied or the nuts (58) that retain the three valve covers (44). Remove the valve covers.
2. For AR type valves refer to section 10.3.1. This section describes the methods for removing and installing the AR valves.
3. For disc type valves refer to section 10.3.2. This section describes the methods for removing and installing disc valves.
4. After the valves have been replaced, inspect each o-ring (45) or gasket (48) on each valve cover (44) if equipped with bolt on covers. FMC recommends that the valve cover o-rings be replaced if nicked or if the o-ring has any other damage. If the pump uses threaded covers then a thread sealant should be applied before installation.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



5. Install the valve cover with the o-ring in place over the studs (56). Installation Tip: Apply grease around each o-ring on the valve cover to prevent the o-ring from falling out of the cover when turned over for cover installation. Replace valve cover washers (57) if supplied and the valve cover hex nuts (58).
6. Tighten the threaded covers enough to seal or torque the cover hex nuts to the recommend values listed in Table 7: Torque Values for Critical Pump Fasteners.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

10.3.1 Replacing AR Valves

10.3.1.1 Introduction

The AR (Abrasion Resistant) valve is a durable wing-guided, spring-loaded check valve. It is used with abrasive fluids, bentonite mud, water, oil etc., and provides excellent performance and long service life. A typical valve is shown in Figure 7 with valve components identified in the exploded view to the right.

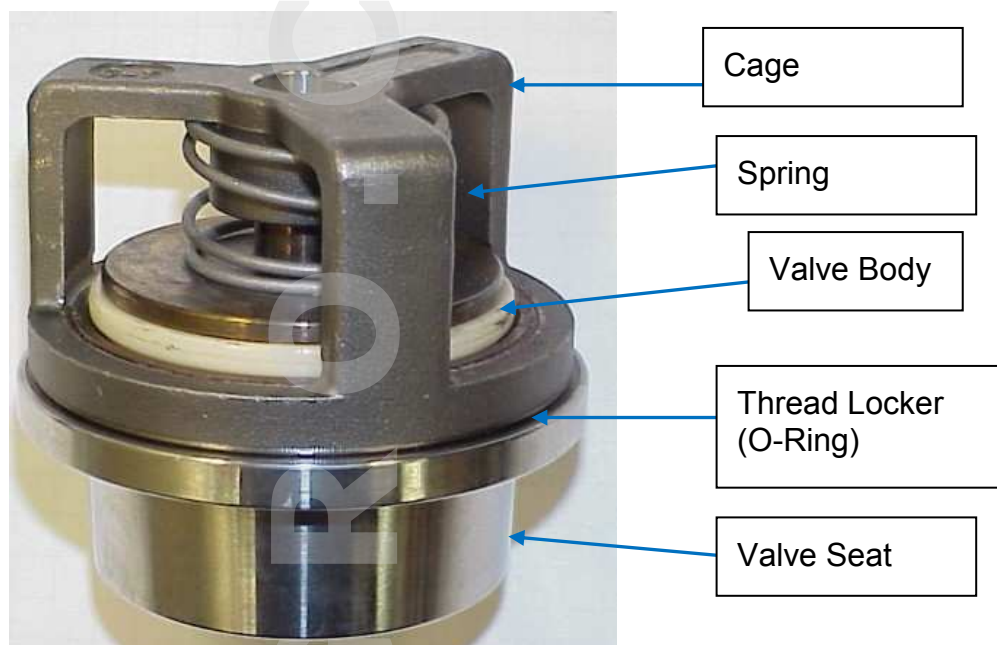


Figure 7: AR Valve Assembly

The primary difficulty in removing an AR Valve is associated with the removal of the tapered seat from the matching locking taper in the fluid cylinder. If the pump is used for discharge pressures in excess of 3,000 psi or for corrosive fluids, this can be a difficult task requiring specialized tooling. For applications involving pressures of 5000 psi or more, FMC recommends the use of AR valves with threaded through bores. Refer to Section 10.3.1.4 for the threaded type puller.

FMC provides two types of tools that can be used to remove the AR type valves in the M06 pumps. Some of the tools are specific to the pump model; some are used only with specific valves and others can be used with any AR installation. Each have advantages and disadvantages. Reference Section 10.3.3 for tooling part numbers.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

10.3.1.2 Knock Out Tool

The simplest of the tools is the removal and installation tool, part number P504436. It is used primarily on the M06 and L06 model pumps for small valves.

To remove a valve, this tool is inserted from the bottom of the fluid cylinder and is stopped by the bottom of the valve seat. The tool is struck sharply with a hammer and the valve is loosened. The suction valve can be removed first through the cylinder cover (if the fluid cylinder is equipped with them) and the discharge valve through the valve cover. If the fluid cylinder does not have cylinder covers the fluid end must be removed first to allow access (See Section 10.2 for fluid cylinder removal instructions).

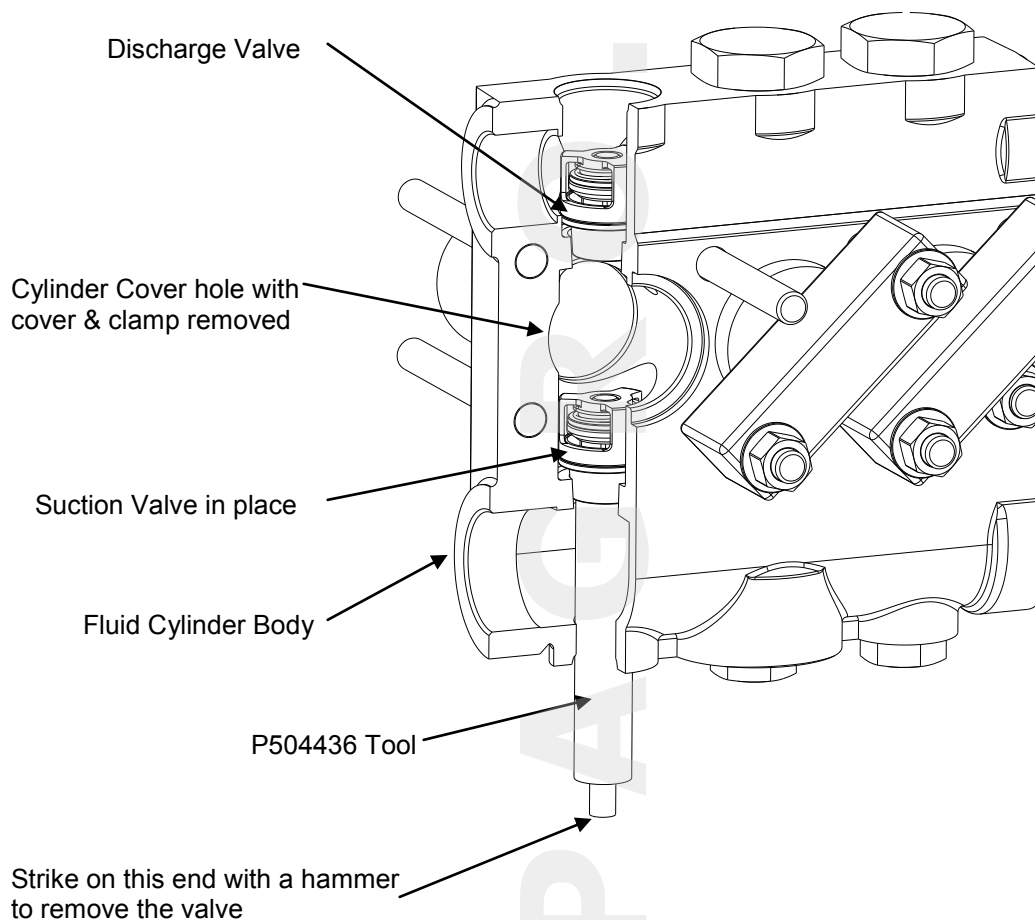


Figure 8: Using the Knockout Tool

This is the lowest cost valve removal device for the AR valves.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

10.3.1.3 Eccentric Discs

This style can be used on all sizes of the AR valves in all of the pump models. The discharge valve is removed first. The valve must be disassembled with the cage, spring and valve body removed from the fluid cylinder prior to the seat being pulled. A special hex drive tool will assist in removing the cage from the seat.

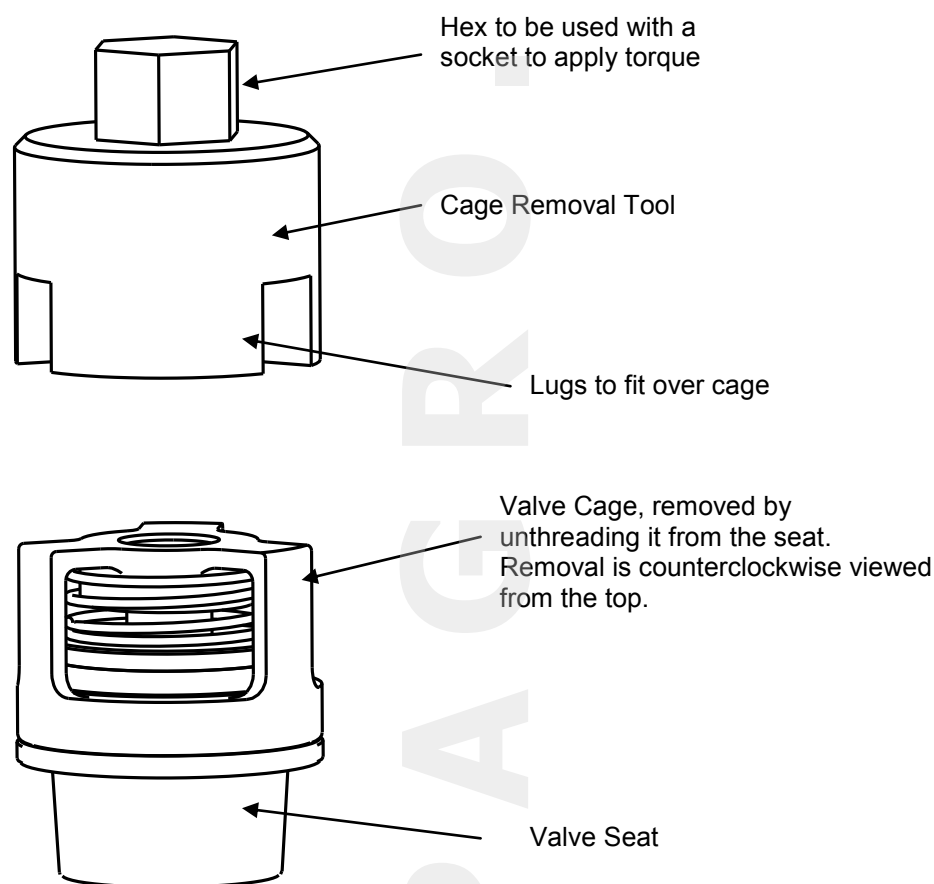


Figure 9: Valve Disassembly

This style of tool includes a disc that passes through the seat to allow tension to be placed underneath it. The disc has a threaded hole that is at the center of the disc (concentric disc). A tension rod is threaded into the hole. The second disc has an eccentric hole with clearance for the tension rod and sits on top of the threaded disc. This keeps the threaded disc engaged with the edge of the seat.

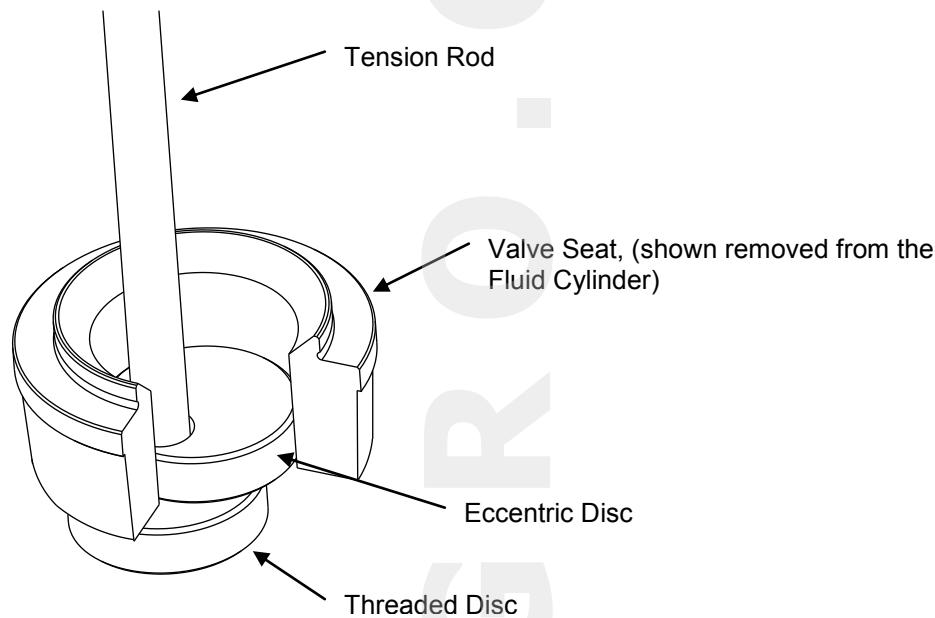


Figure 10: Eccentric Disc in Use

The tension rod is located through the top of the fluid cylinder and through a strong back that rests on the top of the fluid cylinder. A nut is threaded over the tension rod and tightens down on the strong back. The nut is tightened to place tension in the rod, putting upward pressure on the seat of the fluid cylinder.

A bumper is placed over the tension rod with a nut stop above the bumper. With the nut on the strong back torqued (tensioning the rod), the bumper is moved rapidly upward striking the retaining nut. This imparts a shock load into the seat. This sequence is repeated until the seat pops loose from the fluid cylinder.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

**WARNING**

The seat may pop suddenly when force is applied. Stand with feet apart when applying striking action. Keep head back so the tool does not strike your jaw when the seat pops. Ask for a work partner to steady you to avoid slipping. The bumper sliding upward against the stop nut creates a pinch point that can cause hand injury if gripped improperly. Always hold the bumper by the handles only and use leather work gloves to lessen the shock to your hands.

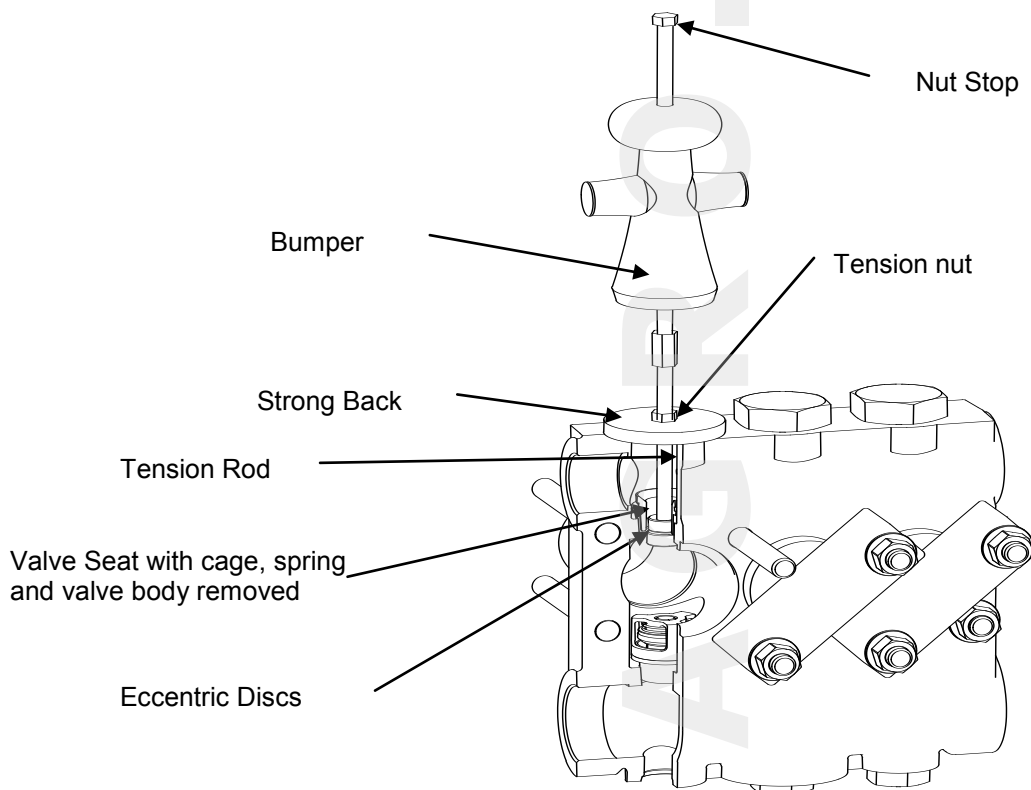


Figure 11: Removing the Seat

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

A variation of this is the use of a hydraulic pump and cylinder jack (porta power) to generate the load that the bumper, strong back, and nut would generate. This is shown in Figure 12. It is useful to put “dry ice” on the seat if it will not loosen. Allow five minutes for cooling of seat before attempting removal. Dry ice is often available at grocery stores.



Dry ice will cause freeze burns to skin if contacted. Use thick leather gloves when handling

WARNING

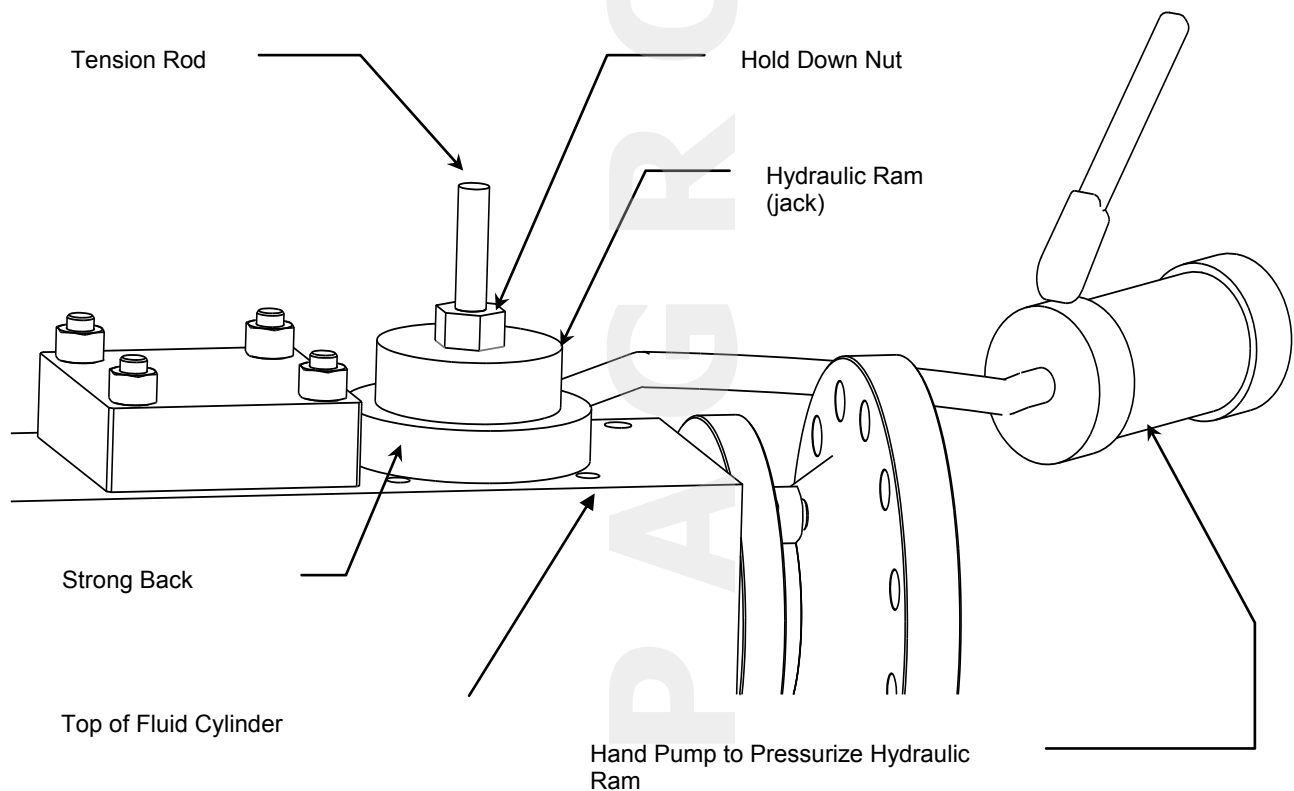


Figure 12: Hydraulic Power used to Remove Valve Seat

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

10.3.1.4 Threaded Type (AR Valves Only)

The threaded type can only be used on valves that have the through bore of the seat threaded prior to installation. The load capacity is similar to the Mandrel Type but it is simpler to use. This is the last variation of methods of applying tension to the valve seat to remove it from the fluid cylinder.

Again the valve must be disassembled with the cage, spring and valve body removed leaving only the seat in the fluid cylinder prior to use of the puller.

A threaded adapter is screwed into the seat after the cage, spring, and valve body have been removed. An adapter nut mates the threaded section to the tension rod, strong back and other parts used on the Eccentric Type to apply tension and then impact loading to remove the seat from the fluid cylinder.

The threaded seat is new to the FMC product line and as such it is being used on applications where the removal force for the seat is expected to be high. With high removal forces required, the hydraulic puller is recommended over the nut, bumper, strong back, and puller assembly.

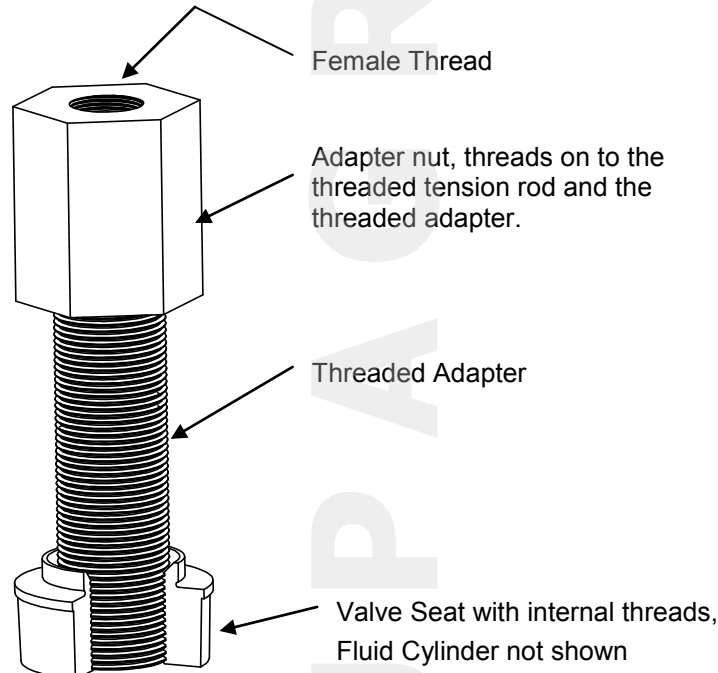


Figure 13: Threaded Tool in use

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



10.3.1.5 Installation of AR Valves

The suction valve must be installed before the discharge valves. The following reassembly procedure is applicable for both.

1. Select a new valve assembly.
2. Carefully clean the taper in the fluid cylinder and on the valve seat with a cleaning solution and a clean cloth. Small scratches can be removed with steel wool or 100 grit emery paper. Remove all dirt, grease, oil, water, or other contaminants from the surfaces. Do not oil the seats or the seating surfaces in the fluid cylinder. Confirm that they are dry before installation.
3. Position the valve assembly directly over the mating taper in the fluid cylinder.
4. Let the valve drop into the taper. Check to see that the seat is sitting in the taper properly and not cocked to one side. If the valve drops straight, it will seize on the taper. When correctly seated, it cannot be pulled up by hand.
5. Place the small end of the knockout tool, part number P504436 through the hole in the cage onto the center of the valve body.
6. While applying downward pressure on the tool, strike the end two times with a hammer to seat the valve. Be very careful not to strike the cage as this will cause the valve to be damaged and fail.
7. Verify that the valve body moves freely.
8. After the valve is secured in the fluid cylinder, verify the cage is torqued to 30 ft-lbs (40.7 N-m).

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

10.3.2 Replacing Disc Type Valves

10.3.2.1 Introduction

The disc type valve used in M06 series FMC pump models is shown in Figure 14. The standard construction of stainless steel seat, disc, and stop are a cost effective design with excellent performance and ample life. These valve assemblies come pre-assembled from the factory and should not need to be disassembled.

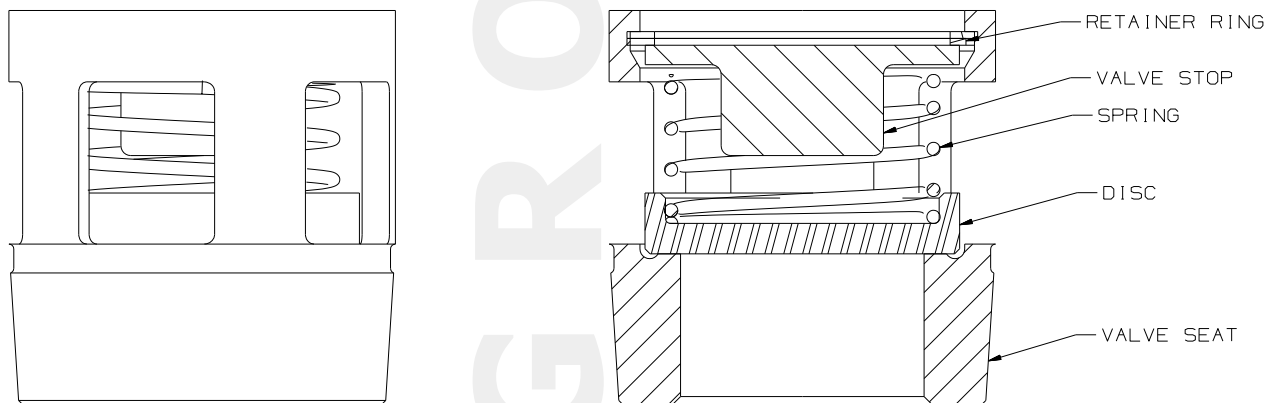


Figure 14: Typical Disc Valve Assembly

When a worn or malfunctioning valve is detected, it must be replaced. With disc valves, the most difficult task associated with replacing a valve is the removal of the seat from the fluid cylinder. The seats are held into the fluid cylinder with a matching locking taper. Removal is particularly difficult if the discharge pressure of the pump was over 3,000 psi or corrosive fluid was pumped.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

10.3.2.2 Valve Removal Tools

There are two (2) Knock Out tools available for removing valves from M06 series pumps. The P534695 Small Ball Knock Out tool is the preferred tool for disc valve removal. The P504436 Knock Out tool can also be used in the M06 pump models.

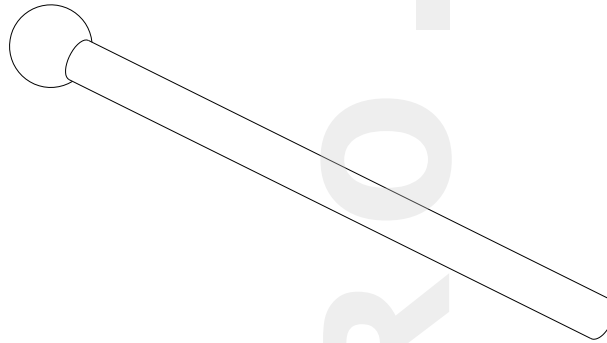


Figure 15: Illustration for the Ball Knock Out Tool

The suction valve is removed first.

All Knock Out tools are used in a similar manner to the P504436 tool shown in section 10.3.1.2. The ball type tool is used with the ball end positioned against the bottom of the valve seat.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

10.3.2.3 Installation of Disc Valves

The suction valves must be installed before the discharge valves can be installed. The following reassembly procedure is applicable for both.

1. Select a new valve assembly and check to ensure the taper on the valve is clean.
2. Carefully clean the taper in the fluid cylinder and on the valve seat with a cleaning solution and a clean cloth. Small scratches can be removed with steel wool or 100 grit emery paper. Remove all dirt, grease, oil, water, or any other contaminants from the surfaces. Do not oil the seats or the seating surfaces in the fluid cylinder. Confirm that they are dry before installation.
3. Position the valve assembly directly over the mating taper in the fluid cylinder.
4. Let the valve seat drop into the taper. Check to see that the seat is sitting in the taper properly and not cocked to one side. If the seat drops straight, it will seize on the taper. When correctly seated, it cannot be pulled up by hand.
5. Place the installation tool P534696 on the top surface of the valve assembly and strike with a hammer three times to seat the valve.
6. Repeat steps 1 through 5 for the discharge valve.

10.3.3 Valve Removal and Installation Tools

Refer to the tables below for available valve installation and removal tools.

Table 5: AR Valve Tool Guide

VALVE TYPE	VALVE SIZE	INSTALL / REMOVAL TOOLS
AR	Series 3 & 23	P504436 – Installation and Knock-out tool P503030 – Eccentric puller

Table 6: Disc Valve Tool Guide

VALVE TYPE	VALVE SIZE	INSTALL / REMOVAL TOOLS
Disc	Small Disc	P534695 - Knock-out tool / Ball Type P534696 – Installation Tool Adapter

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



10.4 Servicing the Power End

10.4.1 Replacing Plunger Rod Oil Seals and Plunger Rods

The plunger rod oil seals (20) retain oil in the power frame and prevent dirt, water, or other contaminants from entering the power frame by way of the plunger rods. The plunger rod oil seals can be replaced with the fluid cylinder still installed but the plunger must be removed. Refer to section 10.1 for plunger removal.



WARNING

Many accidents occur every year through careless use or service of mechanical equipment. You can avoid hazards associated with high-pressure equipment by always following the safety precautions listed in Section 1.0.



NOTE

Ensure that all pressure inside the pump fluid cylinder has been bled off before starting any service work. **CAUTION: CHECK TO ENSURE THAT THE POWER IS LOCKED OUT AND TAGGED OUT**

1. Remove the cradle cover (28) from the power frame (1) by removing the wing nuts (29).
2. Slide the deflector shield (21) off the end of the plunger rod.
3. Remove the seal holders (19) by threading the special puller (FMC p/n 5259112) over the seal holder and prying them out. Pull the seal housing over the end of the plunger rod and out of the cradle. Repeat steps 3, 4, and 5 for the other two seal housings. Installation Tip: Spray the seal housing outside diameter (where it joins the power frame) and plunger rod with penetrating oil like WD-40 to aid removal.
4. Remove the seals (20) from the seal housing (19). Note the orientation of each seal prior to removing it.
5. Inspect the plunger rod at this time. If it is scored or damaged in any way, it must be removed. The plunger rods are staked in the crosshead. Therefore, the crosshead assemblies must be replaced if a plunger rod is damaged.
6. Install new seals (20) in the seal housing (19) in the same orientation that they were originally. The seal lips face toward the power frame.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



7. Apply a light coat of Permatex® #2 (non-hardening) or equivalent to the outer edges and face of seal holder which contacts the power frame. Apply a few drops of motor oil on the plunger rod to aid in installing the seals and to provide lubrication during start-up. Take care to avoid folding the lips back when they are pushed over the plunger rod. Press the seal holder into the power frame.

10.4.2 Servicing the Connecting Rod Bearings



Ensure that all pressure inside the pump fluid cylinder has been bled off before starting any service work. CAUTION: CHECK TO ENSURE THAT THE POWER IS LOCKED OUT AND TAGGED OUT

NOTE

Refer to Figure 16 and Figure 17 with the following instructions.

1. The cradle cover (28) should be removed and the plungers (43) disconnected from the plunger rods (7) to perform the steps in this section.
2. Remove drain plug (22) to allow all oil to drain from power frame into a container for proper disposal. Use proper precautions if power frame is hot (above 130° F, 54° C) to avoid burns from hot oil or hot surfaces.
3. Remove all rear cover cap screws (17). Remove the back cover (14) and back cover gasket (15) from the power frame.
4. Rotate the crankshaft (2) to position the connecting rod end cap (3) nearest the opening and remove the end cap of the connecting rod by unscrewing the hex nuts that hold each cap to the connecting rod body. Rotate the crankshaft to reposition the remaining end caps and repeat the end cap removal. The cap can be removed from the body by tapping with a rubber mallet on the heads of the cap screws when they are partially removed. It may also be required to tap on the head of the connecting rod to loosen it. Take care to not damage the threads on the cap screws.
5. Slide the two shell bearing halves (4) from each connecting rod (3). Note that these bearing halves sometimes adhere to the pins (journals) on the crankshaft.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

**NOTE**

Connecting rods and caps are matched sets and must always be reassembled with their original mate and in the same orientation. Reference the numbered codes stamped on each half of the connecting rod assemblies and make certain they are installed as matched set and in the same orientation when re-assembling the pump.

6. Inspect the crankshaft journals and other internal parts for damage.
7. Clean all parts before assembly and clean the sump area of the power frame.
8. Reinstall or replace shell bearings (4) in the connecting rod and connecting rod caps. Ensure that rod caps are properly assembled with their mating connecting rod. Torque the fasteners holding the end caps to the mating rod per the values given in Table 7: Torque Values for Critical Pump Fasteners. Use back and forth pattern from one fastener to the other tightening with a torque wrench. After the cap screws are torqued, a light strike to the cap with a rubber hammer will help properly seat the rod bearings.
9. Inspect the back cover gasket (15) and replace if damaged. Install back cover gasket and back cover (14). Torque the back cover fasteners (17) per the values given in Table 7: Torque Values for Critical Pump Fasteners.
10. Reinstall the seal housings (19) per section 10.4.1 instructions.
11. After reassembly be sure to fill the pump power end with the proper amount of lubricating oil. Refer to the start-up check list before restarting your pump.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

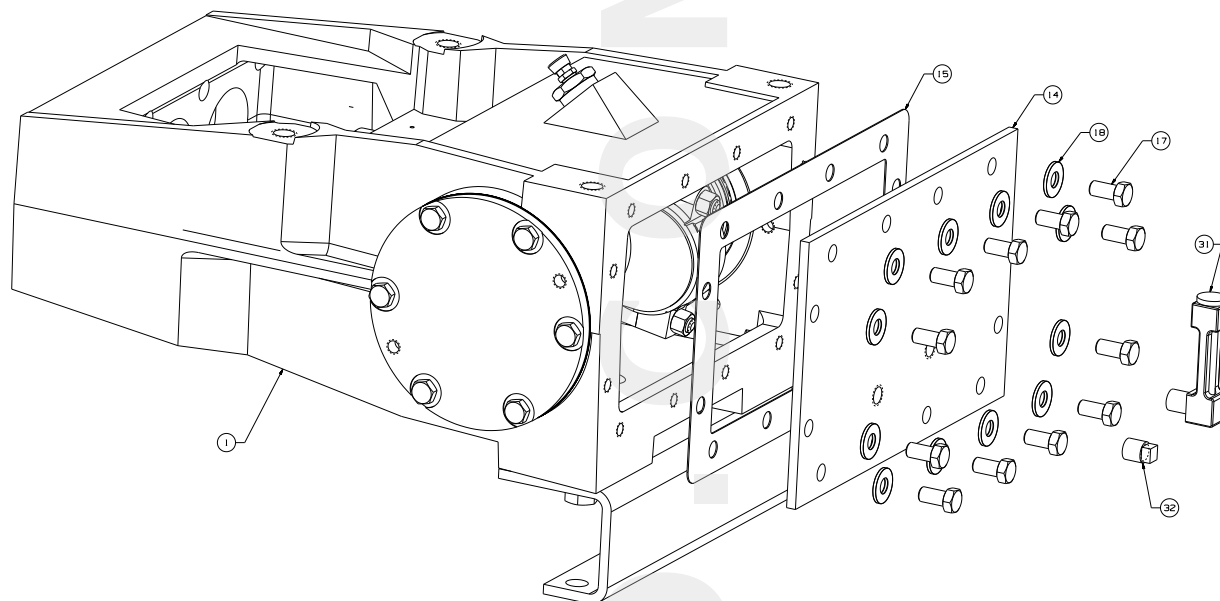


Figure 16: Back Cover Removal

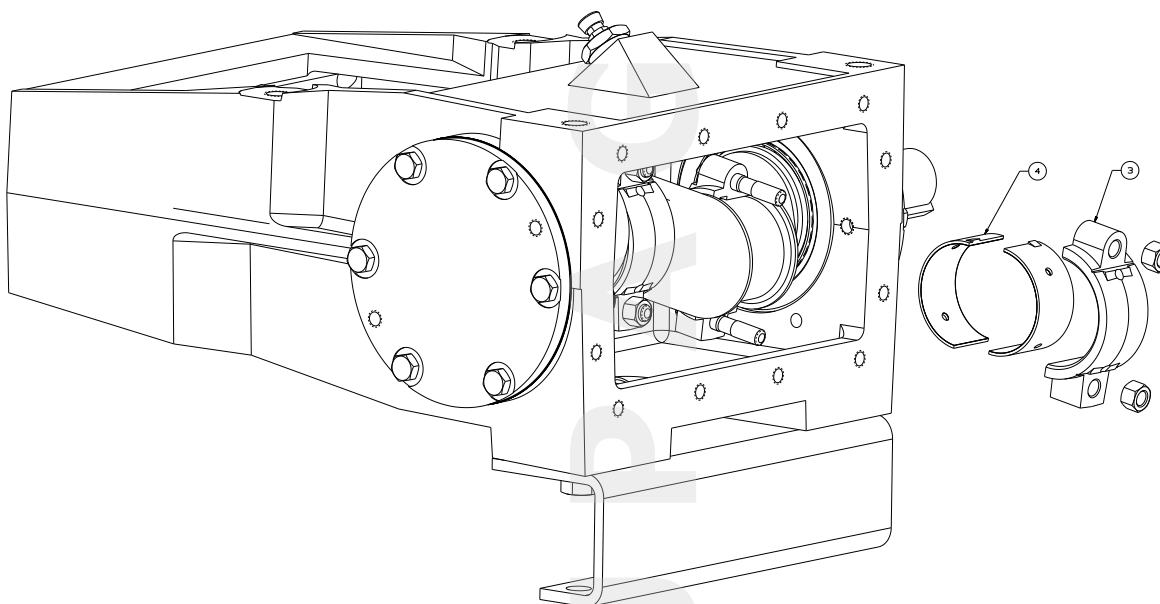


Figure 17: Connecting Rod Cap and Shell Bearing Removal

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197

info@dupagro.com

www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



10.4.3 Servicing Bearing Housings, Crankshaft, and Crossheads



Disconnect the driver from the pump and ensure that suction and discharge lines are disconnected or blocked and have no pressure applied.

WARNING



Ensure that all pressure inside the pump fluid cylinder has been bled off before starting any service work. **CAUTION: CHECK TO ENSURE THAT THE POWER IS LOCKED OUT AND TAGGED OUT**

NOTE

Installation Tip: Mark each bearing housing and the power frame to allow installation back in the original position.

1. The cradle cover (28), and back cover (14) should be removed to perform the steps in this section. Also, the plungers should be disconnected from the plunger rods. Refer to the procedures in Section 10.4.1 and 10.4.2 for details.
2. The plunger rod seal housings (19) must be removed to allow the connecting rod (3) and crosshead assemblies (6) to move forward enough for crankshaft removal. Refer to Section 10.4.1 for instructions.
3. Push the connecting rod and crosshead assemblies as far forward into the power frame as possible to provide clearance for the crankshaft. The connecting rod bolts should be removed completely to provide additional clearance when removing the crankshaft and to reduce the possibility of damage to the crankshaft journals.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

4. Remove the hex head cap screws (16), bearing housings (8), gaskets (10), and shims (9) from both sides of the pump. Service Tip: It may be necessary to tap on the bearing housing with a rubber mallet to free it from the power frame after the hex head cap screws have been removed. If that is not adequate, tapped jack screw holes, which are the same size as the cap screws holding the housing in place, are provided in each bearing housing to help remove stuck housings.
5. Count and record the number of shims on each side to facilitate reassembly. The bearing cups (11) and crankshaft oil seal (13) will remain in the bearing housing.
6. To remove the crankshaft (2), carefully move it through one side of the bearing housing opening in the power frame. The throws may have to be rotated as the crank is removed to clear the connecting rods. The crankshaft should be handled carefully to prevent the critical bearing surfaces from being scratched or damaged.

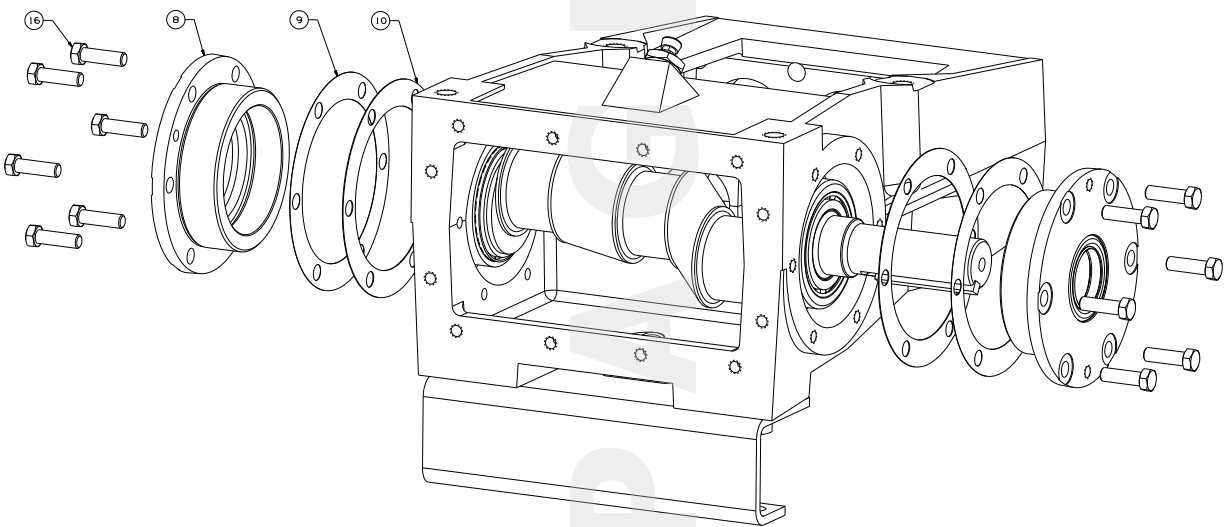


Figure 18: Bearing Housing, Gasket, and Shim Removal

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

7. Bearing cones (12) may be removed from the crankshaft using an automotive type bearing puller or cutting torch. Bearing cups (11) can be removed from the bearing housing using a puller if a sufficient lip is available for the puller arms to grab. An alternate procedure involves running a weld bead around the inside surface of the cup. When it cools, this will reduce the interference between the cup and bearing housing enough to free the cup. If either the cup or cone is replaced, the corresponding cup or cone should be replaced as they are a matched set.

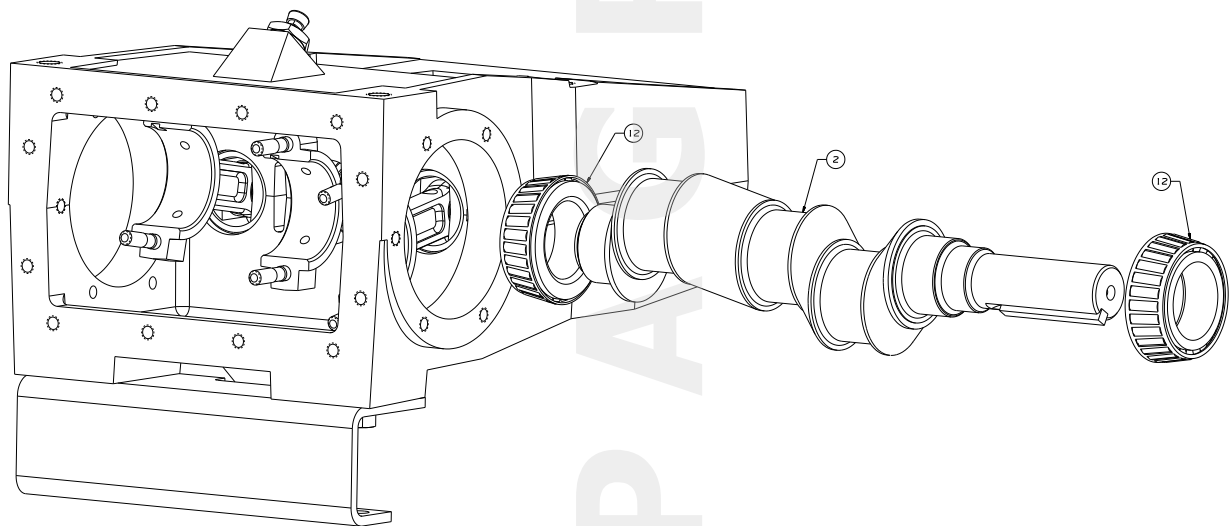


Figure 19: Crankshaft Removal

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands


Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

**NOTE**

Connecting rods and caps are matched sets and must always be reassembled with their original mate and in the same orientation. Reference the numbered codes stamped on each half of the connecting rod assemblies and make certain they are installed as matched set and in the same orientation when re-assembling the pump.

8. Pull the connecting rod/crosshead assemblies from the power frame.
9. Remove the set screws (24) and slide the wrist pin (5) out of the crosshead (6) if crosshead or connecting rod requires service. Keep components matched together.
10. Inspect all components for signs of wear or damage and replace if required. Carefully check the crankshaft bearing surfaces for pits, scratches, or other signs of wear. The connecting rod bearings should be inspected for deep scratches or the top metal surface worn away.

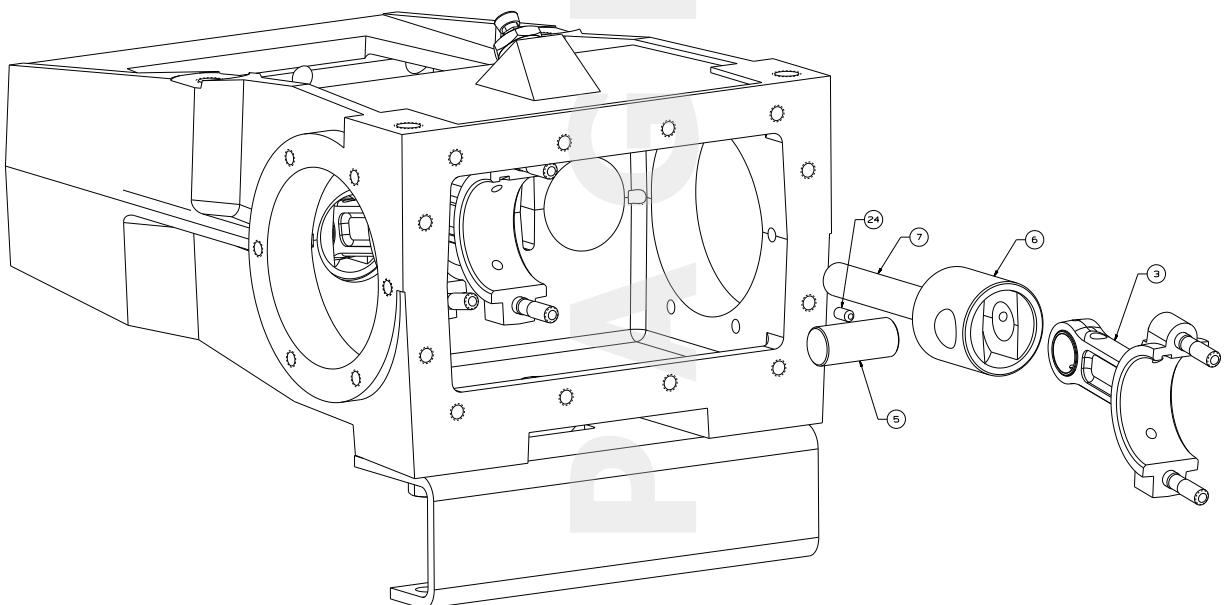**Dupagro B.V.**

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

Figure 20: Connecting Rod and Crosshead Removal

11. If damaged, remove the crankshaft oil seal (13) using a screwdriver or similar object and discard the old seal.
12. Tapered roller bearing cones (12) must be heated to aid in assembly onto the shaft. Always observe proper safety procedures and use heat resistant tools and gloves when handling hot parts. There are a number of recommended methods for heating bearings. Electric ovens or electrically heated oil baths may be used, but only when accompanied by proper thermostatic control.
13. To replace the tapered roller bearings on the crankshaft, heat the cones to a maximum of 300° F (149° C). Slide them down the shaft unit they are full seated against shoulder. The hot cone may pull away from the shoulder unless it is held in position until it cools enough to grab the shaft. Use a .001" thick feeler gauge to ensure the cone is fully seated against the shoulder after parts have cooled.
14. Thoroughly clean all parts with solvent and apply a thin coat of oil before reassembly.
15. Use a press to seat the new cups (11) into the bearing housings. Never use new bearing cones with old bearing cups. Always use matched sets from one manufacturer.
16. Reassemble the crosshead assemblies and connecting rods. Match the marked connecting rod and crosshead back together. Ensure that the set screws (24) retaining the wrist pins (5) are in place (if they were removed for repair or inspection of the wrist pin bushing). The set screw must engage the flat on the wrist pin. For pumps using a single set screw, apply a thread locking compound to ensure that it will remain tight. Refer to Table 7: Torque Values for Critical Pump Fasteners for torque specifications.
17. Push the crosshead/connecting rod assemblies fully forward in power frame to provide maximum clearance for crankshaft installation. Ensure crosshead assemblies are replaced in the same orientation and in the same cylinder bore they were originally.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



The oil cup pocket feeding lubricant to the wrist pin bushing is on the top of the connecting rod and should be in the up position.

NOTE

18. Install crankshaft in the power frame. Take care not to scratch bearing surfaces of the crankshaft.
19. Reinstall the shims (9), gaskets (10) and bearing housings (8) per instructions in section 10.4.2. When tightening the fasteners retaining the bearing cover, use crisscross pattern for tightening with a torque wrench.
20. Reinstall or replace the rod bearings (4) in the connecting rod and connecting rod caps per instructions in section 10.4.2. Ensure that rod caps are properly assembled with their mating connecting rod.
21. A dial indicator must be used to properly adjust the endplay of the crankshaft. Improper adjustment may result in excessive temperature, vibration, noise, and reduced bearing life. FMC recommends between .002" tight to .005" loose of internal axial clearance (end play) when properly assembled. The final adjustment must be verified using a dial indicator as shown in the following steps.



Too tight of end play will cause higher friction and operating temperature. Too loose of end play will cause excessive vibration and noise.


NOTE

22. Turn the crankshaft more than two revolutions to ensure the connecting rods (3) are loose and that there is no binding in the rod bearings; the wrist pin joints are free; and the crossheads move freely in the power frame.

23. Move the crankshaft to one side of the power frame using a light tap from a rubber mallet or a pry bar. Rotate the crankshaft several turns and repeat the light taps from a rubber mallet or the use of a pry bar to ensure the crankshaft is to one side.



24. Mount indicator base on the power frame with the indicator tip on a machined shoulder surface of the crankshaft (do not measure from a cast surface) and the axis of the indicator parallel to the crankshaft.

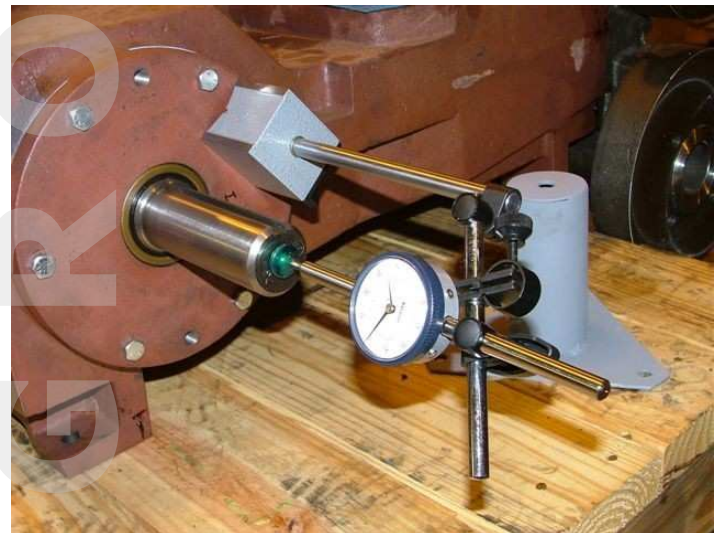

25. Set the dial indicator to zero.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

26. Move the crankshaft back over to the opposite side and read bearing endplay as total indicator movement. Rotate the crankshaft several turns and repeat the effort to move the crankshaft in the direction described in this step. Repeat the dial indicator measurement. Remove or add shims as necessary to achieve proper endplay (.002" tight to .005" loose). Distribute shims equally on both bearing housings. Verify the endplay with the dial indicator.



27. Install the seal housing (19) in the power frame per instructions in section 10.4.1. The crankshaft should turn freely.
28. Complete reassembly of pump. Torque all fasteners as outlined in Table 7: Torque Values for Critical Pump Fasteners.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



11.0 Fastener Torque Requirements

NOTICE: No pump service procedure is complete without insuring that the fasteners have been properly torqued. Failure to properly tighten the pump bolts could cause the pump to leak or possibly allow the pump to fail. Always use a calibrated torque wrench during the installation of all critical fasteners listed in Table 5 below. Values are in foot-pounds (Ft-lb) and newton meters (N-m). Typical sizes are shown in Table 5 below.

Table 7: Torque Values for Critical Pump Fasteners

Fastener Torque Values				
ITEM NO.	COMPONENT DESCRIPTION	M06		
		SIZE	FT-LB	(N-m)
3	Connecting Rod Bolts	0.375	30	41
16	Bearing Housing Bolts	0.375	25	34
17	Back Cover Bolts	0.375	25	34
24	Crosshead Set Screw	0.250	7	9
43	Plunger	0.375	25	34
50,54	Cylinder Attachment Nut*	0.625	120	163
58	Valve Cover Nut*	0.625	120	163

*For Xylan coated 0.625 studs and nuts use 80 ft-lbs (108 N-m)

Refer to Figure 2 and **Error! Reference source not found.** for item numbers.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



12.0 Critical Clearances

When maintenance requiring disassembly of the power end is performed, the following clearances should be checked to see if they are within factory specification or within maximum allowable limits. Additional clearance is allowed for component wear. This additional clearance is a maximum of .002 inches of total diametral wear that can be added to the clearance values in Table 6. For radial clearance, use ½ of the total diametral value.

All dimensions are shown in Inches.

Table 8: Clearance Chart

DESCRIPTION	M06
Crankshaft Throw Diameter (Stroke)	1.50
Crankshaft Pin or Journal (OD)	2.311/2.312
Connecting Rod / Crank Clearance (Max. Total)	0.003
Crosshead Diameter (OD)	2.124/2.125
Crosshead Cylinder Bore (ID)	2.126/2.128
Crosshead to Bore Clearance (Max. Total)	0.004
Wrist Pin Bushing Bore (ID)	.8755/.8765
Wrist Pin to Bore Clearance (Max. Total)	0.002

NOTE: Clearances shown are total diametric values: For radial clearance use ½ the value shown.

Metric Conversion: 1 inch = 25.4 mm
 1 mm = 0.03937 inches
 25 microns (µm) = .001 inches

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

13.0 Trouble-Shooting Pumps

This chart is designed to aid in the solution of pump and pump system problems. Once the problem has been identified, work through the possible causes and solutions until the problem has been corrected.

SYMPTOM	POSSIBLE CAUSE	REMEDY
No flow from pump	<ul style="list-style-type: none"> -No liquid in reservoir (tank) -Inlet line valve closed -Inlet strainer is totally clogged with debris -Crankshaft is not turning 	<ul style="list-style-type: none"> -Ensure lines are connected and fill tank -Ensure lines are connected and open valve -Clean or replace strainer -Check for power to drive and drive connections
Insufficient pressure from pump (ONLY)	<ul style="list-style-type: none"> -Pump speed is too low -Relief valve improperly adjusted or worn -Insufficient system resistance (worn nozzle) -Worn pump valves -Excessive leakage from pump packing 	<ul style="list-style-type: none"> -Check belt tightness or power to motor -Check relief valve and adjust setting -Properly service system -Inspect pump valves and repair or replace -Adjust or replace packing or damaged parts
Insufficient flow from pump (ONLY)	<ul style="list-style-type: none"> -Pump speed is too low -Relief valve improperly adjusted or worn -Worn pump valves -Excessive leakage from pump packing -Plunger worn -Valve taper (seating area) washed out in fluid cylinder 	<ul style="list-style-type: none"> -Check belt tightness or power to motor -Check relief valve and adjust setting -Inspect pump valves and repair or replace -Adjust or replace packing or damaged parts -Replace plunger -Repair or replace fluid cylinder
Insufficient flow or pressure AND rough operation (pump pounds or vibrates)	<ul style="list-style-type: none"> -All pump cylinders not primed -By-pass or relief is piped back to suction -Inlet line too long or too small in diameter -Insufficient NPSHA causing cavitation -Air leaks in suction line or fittings -Vortex in tank near inlet pipe opening -Air entering booster pump -Pump valve stuck open or closed -Valve assembly damaged or unseated -Valve taper (seating area) washed out in fluid cylinder -Gas pocket formation from high spots in suction -Air leaking through packing or stuffing box o-ring 	<ul style="list-style-type: none"> -Prime all chambers -Pipe back to reservoir (tank) -Increase suction pipe size -Provide more NPSHA -Correct installation to stop leaks -Increase submergence or baffle to stop vortex -Correct installation of booster pump -Clean and deburr valve -Properly seat or repair valve -Repair or replace fluid cylinder -Correct suction line installation -Replace worn or failed packing or o-ring

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



Pump runs rough, knocks, or vibrates (ONLY)	<ul style="list-style-type: none"> -Broken or weak valve spring -Valve damaged or unseated -Loose plunger, piston, or rod -Low oil level in power end -Excessive connecting rod bearing clearance -Excessive main bearing clearance -Worn wrist pin or bearing -Pump running backward -Loose sheaves or bushings (v-belt drive) -Gear tooth cracked or broken -Insufficient NPSHA -Excessive acceleration head in suction line -Pulsation dampener improperly charged -Inlet line too long or too small in diameter -Worn piston seal allows air ingress (usually observed when booster not used) 	<ul style="list-style-type: none"> -Replace valve spring -Repair/replace valve or re-seat -Tighten loose components -Fill to proper level -Check cap torque or replace bearings -Adjust end-play -Replace worn components -Correct rotation -Tighten loose components -Replace gear -Provide more NPSH -Install suction stabilizer -Charge to proper pressure -Increase suction pipe size -Replace piston seal
Rapid suction pressure fluctuation	<ul style="list-style-type: none"> -Pump cavitation -Air is entering suction line 	<ul style="list-style-type: none"> -Increase suction size or NPSH -Correct installation to stop leaks
Piping vibration	<ul style="list-style-type: none"> -Same as Pump runs rough above -Excessive pressure variation in discharge -Piping inadequately supported -Excessive short-radius elbows or tees 	<ul style="list-style-type: none"> -See above -Install discharge pulsation dampener -Install supports at proper locations -Correct installation to minimize turns and short-radius fittings
Pump requires excessive power	<ul style="list-style-type: none"> -Discharge pressure too high -Plungers too large -Speed too high -Packing too tight -Misaligned coupling -Belts too tight -Power end bearings too tight -Low motor voltage 	<ul style="list-style-type: none"> -Reduce system back-pressure or relief valve -Install smaller plungers to reduce flow -Reduce speed -Loosen gland (Adjustable packing) -Correct alignment -Correctly adjust belt tension -Increase end-play -Supply correct voltage
Power end overheats (over 170° F) and/or reduced power component end life	<ul style="list-style-type: none"> -Discharge and/or suction pressure too high -Oil level too high or too low -Contaminated power end oil -Incorrect oil viscosity or grade -Misaligned coupling -Belts too tight -Pump running backward -Pump located too close to heat source -Worn or damaged power end bearings -Bearings too tight -Pump operating in direct sunlight 	<ul style="list-style-type: none"> -Reduce pressure or reduce plunger size -Adjust to correct oil level -Refill with clean oil & eliminate contamination -Fill with correct oil -Correct alignment -Correctly adjust belt tension -Correct rotation -Remove heat source or insulate power end -Replace damaged bearings -Increase end-play -Provide cover for shade or install oil cooler
Crankshaft jerks or starts and stops rotation	<ul style="list-style-type: none"> -Drive belts loose and slipping (if equipped) -System relief valve pressure set too high -Discharge line blocked or partially blocked 	<ul style="list-style-type: none"> -Correctly adjust belt tension -Reduce relief valve pressure setting -Clear obstructions from piping system

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



Fluid leaking from pump	<ul style="list-style-type: none"> -Fluid cylinder bolts not properly tightened -Fluid cylinder o-rings (or gaskets) damaged 	<ul style="list-style-type: none"> -Properly tighten and torque bolts -Replace damaged o-rings or gaskets
Reduced packing or piston cup life	<ul style="list-style-type: none"> -Highly abrasive particles in fluid -Packing run dry -Incorrect packing for fluid type -Inadequate packing lubrication -Pump was run dry for extended time -Plunger (or rod) misaligned to stuffing box -Worn plunger -Packing gland too tight (adjustable) -Packing gland too loose (adjustable) -Too much packing in box -Broken or weak spring 	<ul style="list-style-type: none"> -Install strainer or filter -Correct problem & replace packing -Change to correct packing -Correct problem and replace packing -Correct problem and replace packing -Correct alignment -Replace plunger or stuffing box -Replace cylinder liner -Properly adjust gland nut -Properly adjust gland nut -Correct installation problem -Replace spring
Reduced valve life	<ul style="list-style-type: none"> -Highly abrasive particles in fluid -Cavitation damage -Air leaking into suction line or stuffing box -Suction inlet insufficiently submerged -Relief valve or bypass piped to suction -Valve damaged by improper installation 	<ul style="list-style-type: none"> -Install strainer or filter -Correct problem and replace damaged valves -Correct problem and replace damaged valves -Increase submergence or baffle to stop vortex -Pipe back to reservoir (tank) -Replace damaged components
Cracked fluid cylinder or broken fluid end bolts	<ul style="list-style-type: none"> -Discharge pressure too high -Hydraulic shock (cavitation or entrained air) -Discharge valve stuck closed -Fluid freezing in fluid cylinder -Material or manufacturing defect -Bolt or nut not properly torqued -excessive piping loads on fluid end 	<ul style="list-style-type: none"> -Reduce system back pressure or relief valve -Correct piping system problem -Replace damaged components -Change procedure to drain fluid when cold -Replace defective component -Replace fluid cylinder and properly torque -Add supports to piping
Broken crankshaft or connecting rod	<ul style="list-style-type: none"> -Discharge pressure too high -Suction pressure too high -Fluid freezing in fluid end -Hydraulic shock due to cavitation -Material or manufacturing defect -Bearing failure -Belts too tight 	<ul style="list-style-type: none"> -Reduce system back pressure or relief valve -Reduce suction pressure or plunger diameter -Change procedure to drain fluid when cold -Correct piping system problems -Replace defective components -Replace bearings & broken crankshaft or rod -Loosen belts to manufacturer's recommendation
Power end oil is contaminated	<ul style="list-style-type: none"> -Extended operation with failed packing -Hi-press wash wand near breather or seals -Deflector shields are missing or damaged -Crosshead extension seals damaged 	<ul style="list-style-type: none"> -Replace packing and improve monitoring -Provide shields to protect breather and seals -Repair or replace deflector shields -Replace oil seals

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



14.0 Ordering Parts

Service parts are available through FMC's worldwide network of distributors or from the original supplier for the equipment that includes the FMC pump. If unsure where to purchase parts, contact FMC customer service for the location of an authorized parts retailer in your area.

Always insist on genuine FMC replacement parts.

Use the assembly drawing and bill of material included with this manual to determine the components and corresponding part numbers required to service the pump. Confirm that the part number on the drawing or bill of material matches the part number of the pump requiring parts.

When ordering parts, always reference the part number and serial number of the pump with the order. These numbers can be found stamped on the metal name tag affixed to the power end of every pump. Referencing these numbers can ensure that the components you receive work as intended with your pump.

Inquire about any special service tools or complete maintenance kits.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



15.0 Glossary of Commonly Used Terms

CAPACITY	The total volume throughput per unit of time at suction conditions. It includes both liquid and any dissolved or entrained gases. For all practical purposes this can be considered the volume flow rate in the suction pipe. The standard unit of pump capacity is U.S. gallons per minute (GPM) and metric cubic meters per hour (m3/hr).
CAVITATION	The state where fluid pressure drops below vapor pressure, causing the liquid to change from a liquid to a gas and boil. Usually occurs in the chamber between the suction and discharge valves during the suction stroke, and often sounds like a mechanical knock. Cavitation results in the formation of gas bubbles, or cavities, in the fluid that cause vibration and damage to components when they collapse.
DAMPENER	A device that reduces pressure pulsations in the suction or discharge piping. This may be referred to as a suction stabilizer, accumulator, or surge suppressor.
DISPLACEMENT	The volume swept by all pistons or plungers per unit time. This term is typically expressed as gallons per revolution.
POWER END	The portion of the pump that converts supplied rotary motion into linear motion used by the Fluid End to move the pumpage.
MECHANICAL EFFICIENCY	Mechanical efficiency (ME) is the ratio, expressed as a percentage, of pump power output to the pump power input. The mechanical efficiency of reciprocating pumps is very high, typically 85% to 90%.
VOLUMETRIC EFFICIENCY	Volumetric efficiency (VE) is the ratio of actual pump capacity output to theoretical displacement. The volumetric efficiency is affected by the fluid being pumped and the discharge pressure.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

**FLOODED SUCTION**

Implies that the level of liquid in the suction vessel is above the centerline of the suction port of the pump.

FLUID END

The portion of the pump that converts the linear motion supplied by the power end into fluid flow at pressure. This may also be called the Liquid End. It is called a valve chamber in old literature.

NPSHa

An abbreviation that stands for "Net Positive Suction Head Available". NPSHa is the total suction pressure, including allowance for acceleration head, available from the system at the pump suction connection, minus the vapor pressure of the liquid at actual pumping temperature. NPSHa for a reciprocating pump is expressed in units of feet of water or meters of water.

NPSHr

An abbreviation that stands for "Net Positive Suction Head Required". This is the minimum total inlet pressure required by the pump for proper operation. This value is a function of pump design and speed and is determined by the pump manufacturer through a specific NPSH test. NPSHa should exceed NPSHr by at least 5 feet (1.5 m) for water and other incompressible liquids or 3 feet (1.0 m) for light hydrocarbons.

PISTON

A type of power pump that uses a cylindrical seal (piston) mounted on a holder to drive fluid through the valves. The piston seal reciprocates within a stationary cylinder.

PLUNGER

A type of power pump that uses a cylindrical plunger to drive fluid through the valves. The plunger reciprocates through a stationary set of seals known as packing.

POWER PUMP

A reciprocating pump that drives the pumping element(s) using a slider crank mechanism. Power pumps are piston, plunger, or diaphragm type. All require a driver with a rotating shaft, such as a motor or engine, as a power source.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

**POWER FRAME**

The major portion of a power pump that encloses and supports all other components of the power (or drive) end. It is called a pump case in old literature.

STROKE LENGTH

The length of one complete, unidirectional (one direction) motion of the piston or plunger. Stroke length is usually expressed in inches.

PUMP VALVE

A check valve that allows flow of liquid in one direction. FMC pumps have a series of two valves, one suction (inlet) and one discharge, per pumping cylinder.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

16.0 Reference Information

Use the following section to record key information about your specific pump model. Information such as Pump Part Number and Serial Numbers will be needed when ordering service parts. This information is stamped on the metal nameplate located on the pump power frame.

This page may be used to make notations about special parts, procedures, phone numbers and other important information related to your pump.

Pump Model _____

Pump Part Number _____

Serial Number _____

Rated Pressure _____

Rated Capacity _____

Rated Speed _____

Notes:

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.



17.0 Maintenance Records

17.1 Check List for Starting a Pump

	1. Ensure that the drain plug(s) on the bottom of the pump crankcase have been installed and are tight. Ensure that the oil level sight glass, if equipped, has been properly installed.
	2. Check the oil level to ensure that the pump is properly filled with non-detergent motor oil or synthetic oil and that the oil has not been contaminated with water or other contaminants. NOTE: FMC pumps are shipped with no oil in the power frame and must be filled to the proper level with the proper grade of oil prior to start-up. Use Table 3 provided in Section 6.0 for selecting the correct type of oil for your service.
	3. Check the plunger rods to ensure that they are free from abrasive particles or debris. Apply a light oil film to the plunger rods before start up.
	4. Ensure that the pressure relief valve and all accessory equipment have been installed and properly adjusted. Verify that all joints are pressure tight.
	5. Open the suction line valve to allow fluid to enter pump. Prime the fluid cylinder if necessary on the initial start up or after the system piping has been drained. The valve covers may have to be cracked open to assist with priming. CAUTION: Do not loosen the valve covers with volatile or hazardous fluids.
	6. Check to ensure that power is locked out and tagged out. <u>Turn the pump over by hand</u> if possible to ensure free, unobstructed operation. Clean the plungers with a soft cloth while rotating the pump by hand.
	7. Apply small amounts of glycerin to the plungers and plunger rods to lubricate the packing and seals.
	8. Make sure that all guards are in place and secure. Verify that all personnel are in safe positions and that system conditions are acceptable for operation.
	9. The pump is now ready to start. NOTICE: Whenever possible, use a bypass line in the discharge line to allow the pump to start in an unloaded condition (no discharge pressure). Slowly close the bypass line to bring the pump into full load conditions. Shut down immediately if the flow becomes unsteady, pressure fluctuates, or if unusual sounds or vibrations are noted. Ensure that pump rotation is correct.

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197
info@dupagro.com
www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.

17.2 Maintenance Log

[illegible]

Dupagro B.V.

Ooststeeg 102
6708 AX Wageningen
The Netherlands

Phone +31 (0) 317 840 197

info@dupagro.com

www.dupagro.com

Subject to contractual terms and conditions to the contrary, this document and all the information contained herein are the confidential and exclusive property of FMC Technologies, and may not be reproduced, disclosed, or made public in any manner prior to express written authorization by FMC.