


212 PUMP ASSY
P212G
General Purpose
Service Sheet F02827

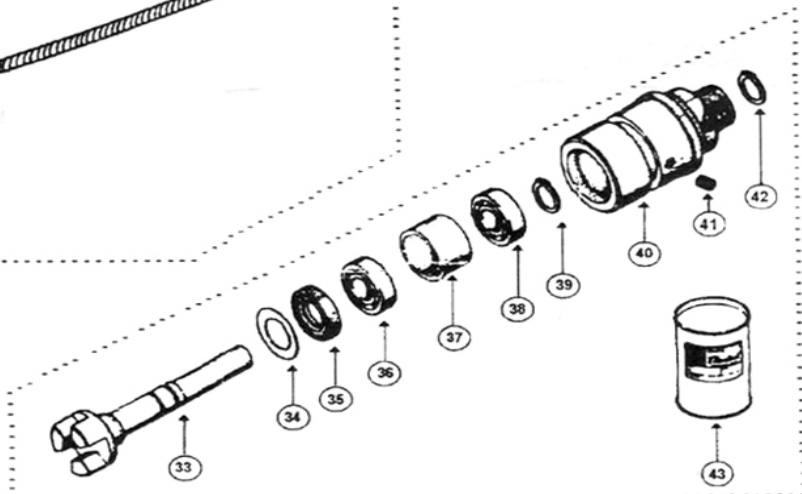

Flex Trash Pump PARTS				Flex Trash Pump SERVICE KITS			
	PN	Description	QTY		PN	Description	QTY
1	3306010	FLEXPUMP Pump Head Assy P212	1		3306500	FLEXPUMP Housing Service Kit	
2	3306020	FLEXPUMP Eye NUT	1	11	3306110	FLEXPUMP Seal	4
3	3306030	FLEXPUMP Pump Head Top Assy	1	14	3306140	FLEXPUMP Sleeve	1
4	3306040	FLEXPUMP Pump Adaptor	1	15	3306150	FLEXPUMP O-ring	1
5	3306050	FLEXPUMP Stud	1	17	3306170	FLEXPUMP Bearing	1
6	3306060	FLEXPUMP Body Addemby - Cast	1	19	3306190	FLEXPUMP Bearing	1
7	3306070	FLEXPUMP Strainer	1	20	3306200	FLEXPUMP Circlip	1
8	3306080	FLEXPUMP Bolt	1	21	3306210	FLEXPUMP Seal	3
9	3306090	FLEXPUMP Pump Head Top Assy	1	22	3306220	FLEXPUMP O-ring	1
10	3306100	FLEXPUMP Impeller	1	24	3306240	FLEXPUMP O-ring	1
11	3306110	FLEXPUMP Seal	4				
12	3306120	FLEXPUMP Housing Assy	1				
13	3306130	FLEXPUMP Spindle Assy	1		3306510	FLEXPUMP Housing Seal Kit	
14	3306140	FLEXPUMP Sleeve	1	11	3306110	FLEXPUMP Seal	4
15	3306150	FLEXPUMP O-ring	1	14	3306140	FLEXPUMP Sleeve	1
16	3306160	FLEXPUMP Spindle	1	15	3306150	FLEXPUMP O-ring	1
17	3306170	FLEXPUMP Bearing	1				
18	3306180	FLEXPUMP Spacer	1				
19	3306190	FLEXPUMP Bearing	1		3306520	FLEXPUMP Coupling Service Kit	
20	3306200	FLEXPUMP Circlip	1	34	3306340	FLEXPUMP Washer PTFE	1
21	3306210	FLEXPUMP Seal	3	35	3306350	FLEXPUMP Seal	1
22	3306220	FLEXPUMP O-ring	1	36	3306360	FLEXPUMP Bearing	1
23	3306230	FLEXPUMP Adaptor Housing	1	38	3306380	FLEXPUMP Bearing	1
24	3306240	FLEXPUMP O-ring	1	39	3306390	FLEXPUMP Circlip	1
25	3306250	FLEXPUMP Oil	1	42	3306420	FLEXPUMP O-ring	1
26	3306260	FLEXPUMP Flexible Shaft Assy 6mtr					
26	3306262	FLEXPUMP Flexible Shaft Assy 9mtr					
27	3306270	FLEXPUMP Casing Assy /f 6mtr Shaft	1	9	3306090	FLEXPUMP Pump Head Top Assy	1
27	3306272	FLEXPUMP Casing Assy /f 9mtr Shaft	1	6	3306060	FLEXPUMP Body Addemby - Cast	1
28	3306280	FLEXPUMP Ferrule Assy	1	1	3306010	FLEXPUMP Pump Head Assy P212	1
29	3306290	FLEXPUMP Spring - Outer	1	12	3306120	FLEXPUMP Housing Assy	1
30	3306300	FLEXPUMP Core End	1	16	3306160	FLEXPUMP Spindle	1
31	3306310	FLEXPUMP Core Assy /f 6mtr Shaft	1	26	3306260	FLEXPUMP Flexible Shaft Assy 6mtr	1
31	3306312	FLEXPUMP Core Assy /f 9mtr Shaft	1	26	3306262	FLEXPUMP Flexible Shaft Assy 9mtr	1
32	3306320	FLEXPUMP Coupling Assy	1	32	3306320	FLEXPUMP Coupling Assy	1
33	3306330	FLEXPUMP Spindle Assy	1				
34	3306340	FLEXPUMP Washer PTFE	1		Flexible Shaft Assy 9mtr		
35	3306350	FLEXPUMP Seal	1	27	3306272	FLEXPUMP Casing Assy for 9mtr Shaft	1
36	3306360	FLEXPUMP Bearing	1	28	3306280	FLEXPUMP Ferrule Assy	1
37	3306370	FLEXPUMP Spacer	1	29	3306290	FLEXPUMP Spring - Outer	1
38	3306380	FLEXPUMP Bearing	1	30	3306300	FLEXPUMP Core End	1
39	3306390	FLEXPUMP Circlip	1	31	3306312	FLEXPUMP Core Assy for 9mtr Shaft	1
40	3306400	FLEXPUMP Bearing Housing	1				
41	3306410	FLEXPUMP Screw - S Set	1				
42	3306420	FLEXPUMP O-ring	1				
43	3306430	FLEXPUMP Grease	1				